



**IndustrialPro™ and MobilityPro™ Gateway  
Wireless Modems**

**User's Guide**

**Version 1.15**

**August 15, 2014**

No part of this publication, or any software included with it, may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, including photocopying, electronic, mechanical, recording or otherwise, without the prior written permission of the copyright holder.

Red Lion Controls provides this document as is, without warranty of any kind either expressed or implied including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Red Lion may make changes of improvements in the equipment, software, or specifications described in this document at any time and without notice. These changes may be incorporated in new releases of this document.

This document may contain technical inaccuracies or typographical errors. Red Lion and its subsidiaries waive responsibility for any labor, materials, or costs incurred by any person or party as a result of using this document.

Red Lion and any of its subsidiaries or other affiliates shall not be liable for any damages (including, but not limited to, consequential, indirect or incidental, special damages, or loss of profits or data) even if they were foreseeable and Red Lion has been informed of their potential occurrence arising out of or in connection with this document or its use.

#### Computer Software Copyrights

The products described in this manual include copyrighted Red Lion computer programs stored in semi-conductor memories or other media. Laws in Canada, the United States and other countries preserve for Red Lion certain rights for copyrighted computer programs, including the exclusive right to copy or reproduce in any form the copyrighted computer program. Accordingly, any copyrighted Red Lion computer programs contained in the Red Lion products described in this manual may not be copied without the express written permission of Red Lion.

Furthermore, the purchase of Red Lion products shall not be deemed to grant either directly or by implication, estoppels, or otherwise, any license under the copyrights, patents or patent applications of Red Lion, except for the normal non-exclusive, royalty-free license to use that arises by operation of laws in the sale of a product.

#### **Red Lion Controls**

20 Willow Springs Circle,  
York, PA 17406

Phone: 1-717-767-6511

Fax: 1-717-764-0839

Web: [www.redlion.net](http://www.redlion.net)

### **Federal Communication Commission Interference Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

To comply with FCC RF exposure limits for general population/uncontrolled exposure, the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be collocated or operating in conjunction with any other antenna or transmitter.

## Industry Canada

*This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.*

*This radio transmitters BT-5630v2 / BT-5830v2 (IC: 2991A-BT5X30V2) and BT-5730v2 have been approved by Industry Canada to operate with the antenna types listed below with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.*

*A portable duct-type antenna with 3dBi gain and 50 ohm impedance is the approved antenna type.*

*Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.*

To comply with Industry Canada RF exposure limits for general population/uncontrolled exposure, the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be collocated or operating in conjunction with any other antenna or transmitter.

*Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.*

*Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.*

*Le présent émetteur radio (identifier le dispositif par son numéro de certification ou son numéro de modèle s'il fait partie du matériel de catégorie I) a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés ci-dessous et ayant un gain admissible maximal et l'impédance requise pour chaque type d'antenne. Les types d'antenne non inclus dans cette liste, ou dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur.*

## Liability Notice

While every effort has been made to achieve technical accuracy, information in this document is subject to change without notice and does not represent a commitment on the part of Red Lion Controls, or any of its subsidiaries, affiliates, agents, licensors, or resellers. There are no warranties, express or implied, with respect to the content of this document.

These products should not be used to replace proper safety interlocking. No software-based device (or any other solid-state device) should ever be designed to be responsible for the maintenance of consequential equipment or personnel safety. In particular, Red Lion disclaims any responsibility for damages, either direct or consequential, that result from the use of this equipment in any application.

All power, input and output (I/O) wiring must be in accordance with Class I, Division 2 wiring methods and in accordance with the authority having jurisdiction.

Suitable for use in Class I, Division 2, Groups A, B, C and D hazardous locations, or non-hazardous locations only.

**WARNING – EXPLOSION HAZARD** – SUBSTITUTION OF COMPONENTS MAY IMPAIR SUITABILITY FOR CLASS 1, DIVISION 2.

**WARNING – EXPLOSION HAZARD** – WHEN IN HAZARDOUS LOCATIONS, DISCONNECT POWER BEFORE REPLACING OR WIRING MODULES.

**WARNING – EXPLOSION HAZARD** – DO NOT DISCONNECT EQUIPMENT UNLESS POWER HAS BEEN SWITCHED OFF OR THE AREA IS KNOWN TO BE NONHAZARDOUS.

These products are operator interface units to be used within control panels. These devices are intended for use in Class I, Division 2, Hazardous Locations, industrial control applications. The enclosure shall be suitable for the location.

## AVERTISSEMENTS POUR INSTALLATION ET ENDROITS DANGEREUX

Ces produits ne doivent pas être utilisés pour remplacer le verrouillage de sécurité approprié. Aucun dispositif basé sur un logiciel (ou tout autre dispositif à l'état solide) devraient jamais être conçus pour être responsable de l'entretien de l'équipement consécutifs ou la sécurité du personnel. En particulier, Red Lion décline toute responsabilité pour les dommages, directs ou indirects, résultant de l'utilisation de cet équipement dans n'importe quelle application.

Tout courant, câblage entrée et sortie (I / O) doit être conforme aux méthodes de câblage à la Classe I, Division 2 et conformément à l'autorité compétente.

Cet appareil est adapté pour utilisation en Classe I, Division 2, Groupes A, B, C, D endroits dangereux ou endroits non-dangereux.

**AVERTISSEMENT – RISQUE D'EXPLOSION** – LA SUBSTITUTION DE TOUT COMPOSANT PEUT NUIRE À LA CONFORMITÉ DE CLASSE I, DIVISION 2

**AVERTISSEMENT – RISQUE D'EXPLOSION** – LORSQUE DANS DES ENDROITS DANGEREUX, DÉBRANCHEZ LE CORDON D'ALIMENTATION AVANT DE REMPLACER OU DE BRANCHER LES MODULES.

**AVERTISSEMENT – RISQUE D'EXPLOSION** – NE DÉBRANCHEZ PAS L'ÉQUIPEMENT À MOINS QUE L'ALIMENTATION AIT ÉTÉ COUPÉE OU QUE L'ENVIRONNEMENT EST CONNU POUR ÊTRE NON DANGEREUX.

Ces produits sont des unités d'interface opérateur qui doivent être utilisés à l'intérieur des panneaux de commande. Ces appareils sont destinés à une utilisation en Classe I, Division 2, zones dangereuses, applications de contrôle industriel. L'enclos doit être adapté à l'environnement.

**Change history**

<b>Version</b>	<b>Date</b>	<b>Description</b>
1.15	May 23, 2014	Add UL Warnings
1.14	November 30, 2012	Updated to cover BT-57xx LTE models
1.13	February 15, 2012	Updated to cover BT-5x30 Wi-Fi models
1.10	September 27, 2010	Update event and store and forward sections Update environmental specifications
1.9	June 7, 2010	Add modem pictures Red Lion labels
1.8	March 30, 2010	Change document format

## Table of content

<b>1</b>	<b>Product Overview</b>	<b>10</b>
1.1	Introduction	10
1.2	Modem features	11
1.3	Specifications	13
<b>2</b>	<b>BlueVue Device Manager (BVDM)</b>	<b>24</b>
2.1	Connecting to the modem	25
2.2	Software overview	27
<b>3</b>	<b>AT Commands</b>	<b>28</b>
3.1	Access	28
<b>4</b>	<b>Activation &amp; WAN Setup</b>	<b>29</b>
4.1	Activation (CDMA modems only)	29
4.2	WAN Setup	30
<b>5</b>	<b>LAN Setup</b>	<b>33</b>
5.1	Ethernet and USB LAN	33
5.2	LAN configuration	33
5.3	Wireless(WiFi)	34
5.4	DHCP server	34
5.5	Dial-up Networking (DUN) over serial	34
<b>6</b>	<b>IP Networking Features</b>	<b>35</b>
6.1	Port-forwarding	35
6.2	DMZ	36
6.3	IP pass-through	37
6.4	Dynamic IP registration	38
6.5	IP Security (IPSEC)	38
6.6	Access Control List (ACL)	39
6.7	Password protection	39
<b>7</b>	<b>Serial IP</b>	<b>41</b>
<b>8</b>	<b>GPS</b>	<b>42</b>
8.1	GPS protocols	43
8.2	Odometer	43
8.3	Configuring the modem for GPS reporting	43
<b>9</b>	<b>I/O Management</b>	<b>45</b>
9.1	Digital Output control	45
9.2	Digital Input state query	45
9.3	Analog Input value query	46
<b>10</b>	<b>Event Reporting</b>	<b>47</b>
10.1	Events	47
10.2	Store and forward	47
10.3	Actions	48
10.4	Reports	48
<b>11</b>	<b>Hardware Installation</b>	<b>49</b>
11.1	Mounting the BT-5x00v2 series modem	49
11.2	Mounting the BT-6000 series modem	49
11.3	Cellular antenna	49
11.4	Ethernet cable	51

11.5	USB cable .....	51
11.6	Serial cable.....	51
11.7	Power source .....	51
<b>12</b>	<b>Appendixes.....</b>	<b>53</b>
12.1	BlueVue Device Manager Troubleshooting.....	53
12.2	Activation Troubleshooting .....	57
12.3	Troubleshooting .....	60
12.4	Firmware Upgrades .....	63
12.5	Sending AT Commands.....	65
12.6	Dial-Up Networking in Windows .....	67
12.7	Warranty.....	69
12.8	Customer Support .....	69

## Figures

Figure 1 - Router mode .....	11
Figure 2 - IP pass-through mode .....	11
Figure 3 – Serial connector (looking at back of modem) .....	23
Figure 4 – The different ways to connect to a modem.....	25
Figure 5 – Connecting to a remote modem.....	26
Figure 6 – Confirming the success of activation .....	30
Figure 7 – Editing the account information .....	31
Figure 8 – Testing the connection.....	32
Figure 9 – Default LAN IP configuration.....	33
Figure 10 – Sample modem configuration for communicating with a device that has the IP 10.127.0.17 .....	34
Figure 11 – Port-forwarding entries.....	36
Figure 12 – Enabling DMZ .....	36
Figure 13 – Enabling IP passthrough.....	37
Figure 14 – Enabling Dynamic IP Registration .....	38
Figure 15 – Enabling password protection .....	39
Figure 16 – Serial IP.....	41
Figure 17 – GPS configuration screen .....	42
Figure 18 – Modem with good signal strength .....	57
Figure 19 – Phone number being displayed on the Modem Diagnostic screen after activation .....	57
Figure 20 – WAN IP being displayed after the modem successfully connects to the cellular network .....	58
Figure 21 – Upgrading the firmware.....	64
Figure 22 – Creating a new connection in Windows XP .....	67

## Tables

Table 1 – Modem features.....	12
Table 2 – General specifications .....	13
Table 3 - 4-pin Molex connector (BT-5xx0v2).....	17
Table 4 - 4-pin Molex connector (BT-6x00).....	17
Table 5 - 4-pin screw terminal (BT-6xx1) .....	18
Table 6 – DC 2.5mm Barrel adapter (BT-6000).....	18
Table 7 – Power consumption .....	<b>Error! Bookmark not defined.</b>
Table 8 – LEDs .....	22
Table 9 – Reset button functions.....	23
Table 10 – DHCP IP assignment .....	33
Table 11 – NMEA messages information .....	43
Table 12 – dB loss per 100 feet of cable type .....	49

# 1 Product Overview

## 1.1 Introduction

The BlueTree 5000v2 and 6000 series modems are rugged cellular modems built to provide simple and reliable communication over a CDMA or GSM cellular data networks. They are typically used in applications such as Public Safety, Transportation, Vehicle Tracking, Telemetry, SCADA, Remote / Temporary Offices, Landline Replacement, and WAN backup / Business Continuity.

The models covered by this document are:

Type	CDMA EvDO.A	GSM EDGE	GSM HSPA	LTE
<b>MobilityPro™ Gateway</b>				
<i>Standalone GPS</i>	<b>BT-5600v2</b>		<b>BT-5800v2</b>	<b>BT-5700v2</b>
<i>Standalone GPS with Wi-Fi</i>	<b>BT-5630v2</b>		<b>BT-5830v2</b>	<b>BT-5730v2</b>
<b>IndustrialPro™ Gateway</b>				
<i>4-pin power connector</i>	<b>BT-6600</b>		<b>BT-6800</b>	<b>BT-6700</b>
<i>Screw-block power connector</i>	<b>BT-6601</b>	<b>BT-6401</b>	<b>BT-6801</b>	<b>BT-6701</b>
<i>PoE power input</i>	<b>BT-6601EB</b>	<b>BT-6401EB</b>	<b>BT-6801EB</b>	<b>BT-6701EB</b>
<i>Ethernet Switch</i>	<b>BT-6621</b>	<b>BT-6421</b>	<b>BT-6821</b>	<b>BT-6721</b>

The modem supports two operational modes: router mode, and IP pass-through mode.

### 1.1.1 Router mode

In Router mode, which is the default mode, the modem manages local and wireless connections independently, and is capable of routing data packets back and forth between the two.

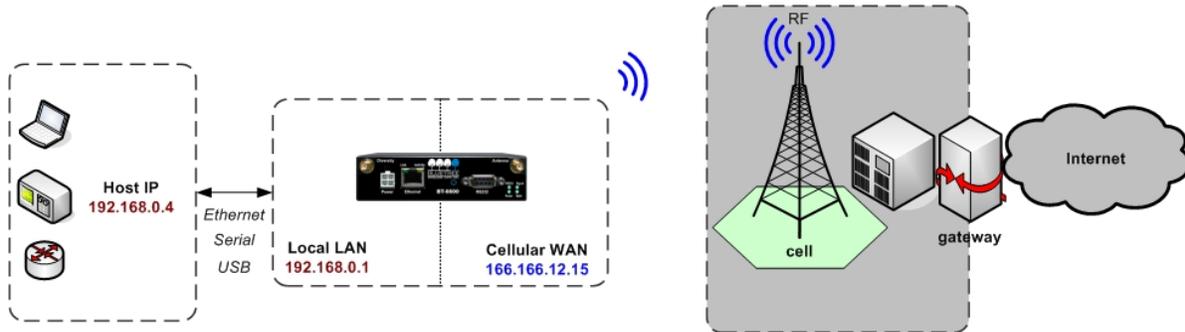


Figure 1 - Router mode

The modem manages two connections at the same time, thus acting as a gateway/router:

- **Cellular WAN connection:** This is the Wide Area Network connection to the cellular network/Internet. The modem can be configured to automatically and autonomously establish a packet data connection to the cellular carrier and acquire a WAN IP address.
- **LAN connection:** This is the local connection between the modem and any device attached to its Serial / Ethernet / USB ports. In the case of Ethernet and USB, the modem acts as a DHCP server and assigns a private LAN IP address to the attached device.

The modem then routes packets back and forth between its WAN and LAN connections, and in turn allows the locally attached device to communicate with computers or devices at a remote location.

### 1.1.2 IP pass-through mode

In IP pass-through mode, the modem assigns its WAN IP address directly to the attached host, thus becoming a fully transparent actor in the communication process. The modem remains reachable through its reserved TCP and UDP ports so that remote administration and configuration is still possible. Note that this mode allows only one IP address to be assigned to the first connected device via DHCP (This configuration is not recommended for BT-6x21).

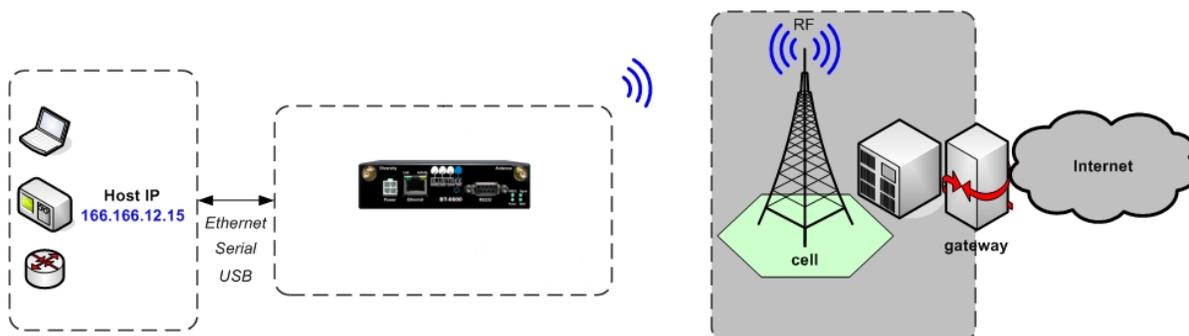


Figure 2 - IP pass-through mode

## 1.2 Modem features

Table 1 – Modem features

<b>3 different data connection interfaces</b>	Serial/RS-232/COM, Ethernet, and USB
<b>Ethernet switch</b>	<i>Available on the BT-6x21 models only.</i> These models have an embedded 5-port Ethernet switch.
<b>Power-over-Ethernet</b>	Models ending in EB (BT-6x01EB) are models with built in power sourcing. Power-over-Ethernet compatible devices can be powered simply by connecting it to the modem's Ethernet port.
<b>Autonomous &amp; persistent connection management</b>	Fully integrated TCP/IP protocols allow the modem to connect autonomously to the packet network (Internet). This feature enables capabilities such as: in-call diagnostic, Serial-IP, stand-alone GPS, remote configuration and remote firmware upgrades.
<b>DHCP server</b>	The modem's DHCP server allows easy administration and setup of the local network by automating IP address assignment
<b>IP pass-through</b>	The modem can assign its WAN IP address to the attached host, thus disabling the DHCP server's Network Address Translation. Even when performing pass-through, the modem remains reachable for remote administration through its reserved TCP ports.
<b>IP security</b>	The modem can be configured with up to 10 IPSEC tunnels for increased security in communications.
<b>In-call diagnostic</b>	The user can get modem status information while in a data call, without interrupting the data session
<b>Serial IP</b>	The modem can provide a reliable means of communication with serial-only legacy devices. It can encapsulate data coming from the serial port into a TCP or UDP packet and send it to a remote server on the packet network or Internet. It can decapsulate IP packets coming from the network and send raw data to the serial port.
<b>Remote configuration</b>	The modem can be remotely configured or diagnosed using BlueVue Device Manager or a terminal session
<b>Remote firmware upgrade</b>	The modem's firmware can be remotely upgraded using BlueVue Device Manager software
<b>Password protection</b>	The modem's configuration can be protected from tampering by requesting the user to enter a password before the existing modem configuration can be viewed or modified
<b>Integrated GPS receiver</b>	BT-5000v2 models include a GPS receiver for Automatic Vehicle Location (AVL). The modem can report this positioning data locally to any of the local data interfaces (serial, Ethernet, or Ethernet-over-USB), and/or remotely to a predefined server (see stand-alone).
<b>Standalone GPS</b>	BT-5000v2 modems can be used for remote asset tracking by sending GPS data to a remote server without the need for a client application or computer connected to the modem.
<b>Store and forward</b>	If a unit loses its connection to the cellular network, the event data being collected from I/O, GPS and other sources will be stored in memory and automatically forwarded when the connection is reestablished. This is available when using TCP (with or without BEP ACK) or UDP (with BEP ACK

	only).
<b>Inputs and outputs</b>	<p>Sensors can be connected to the I/O ports of the modem. Depending on models, the modem is capable of monitoring up to four digital inputs for any change in state, and up to three analog inputs for changes in gradient data sources. The modem also has up to three digital outputs that can be used to remotely trigger relays.</p> <p>The inputs and outputs can be used with the event reporting protocol to allow automatic reports and triggers.</p>
<b>Event reporting</b>	<p>The modem can send a report to up to 10 destinations when a user-defined event is triggered. Up to 30 events can be defined based on I/O signals, GPS data, RF status. The modem has an embedded event reporting protocol that automatically formats the messages reported to the remote server.</p>
<b>Mobile Originated Management</b>	<p>The modem can connect to a remote server and perform management actions (firmware upgrade, configuration changes ...). This feature uses Event Reporting.</p>
<b>Partner apps</b>	<p>The modem can host partner applications used for example to report cellular traffic usage, vehicle diagnostics, alarms, ...</p>

## 1.3 Specifications


### 1.3.1 General specifications


*Table 2 – General specifications*

<b>Wireless interfaces</b>	<p><b>CDMA EvDO.A models</b> Dual-band CDMA2000 EVDO Rev. A (with diversity) Backward compatible with 1xRTT and IS95</p> <p><b>GSM EDGE Models</b> Quad-band 850/900/1800/1900 GSM Backward compatible with Quad-band GPRS/UMTS</p> <p><b>GSM HSPA Models</b> Quad-band 800/850/1900/2100 MHz WCDMA (with diversity) HSDPA/HSUPA/HSPA Backward compatible with GPRS/EDGE/UMTS</p>
<b>Peak data rates</b>	<p>Download: CDMA – 3.1Mbps / EDGE – 384 kbps / HSPA - 7 Mbps Upload: CDMA - 1.8 Mbps / EDGE – 120 kbps / HSPA - 5.76 Mbps</p>
<b>Serial interface</b>	1x RS-232 Serial DB9 115200bps
<b>USB interface</b>	<p><b>BT-5xxxv2 series:</b> 1x USB 2.0 type B <b>BT-6xxx series:</b> 1x USB 2.0 mini B</p>
<b>LED indicators</b>	Power, WAN, Signal, RS232, GPS, Ethernet Link & Activity
<b>Dimensions</b>	<p><b>BT-6x0x:</b> 120 x 96 x 32 mm (4.7 x 3.77 x 1.25"), 453g (1.0 lb) <b>BT-6x21:</b> 120 x 96 x 51 mm (4.7 x 3.77 x 2.00"), 500g (1.1 lb) <b>BT-5xx0v2:</b> 159 x 127 x 53 mm (6.26 x 5.00 x 2.09"), 500g (1.1 lb)</p>
<b>Power Input</b>	8 - 30 VDC (12 VDC nominal), Power over Ethernet on BT-6x01EB


<b>Power consumption</b>	See Table 6
<b>Environmental</b>	<p><b>BT-5000v2 series</b>          Operating Temp: -40 to +85°C (-40 to 185°F)          Shock &amp; Vibration: MIL-STD 810F/202G          Humidity: 5 to 95% non-condensing</p> <p><b>BT-6000 series</b>          Operating Temp: -40 to +85°C (-40 to 185°F)          Shock &amp; Vibration: IEC 60068-2-1/2/6/27/30, DNV 2.4 3.7/8/9, MIL-STD 810F/202G          Humidity: 5 to 95% non-condensing</p>
<b>Certification</b>	Hazardous Locations - Class I, Div. 2, Groups A,B,C,D, UL1604 Electrical Safety - UL508/CSA22.2/14 (CUL) EMC- FCC, part 15 and Industry Canada, ICES-003 PTCRB (GSM), CE, R&TTE


**1.3.2 Mechanical specifications BT-5xx0v2**

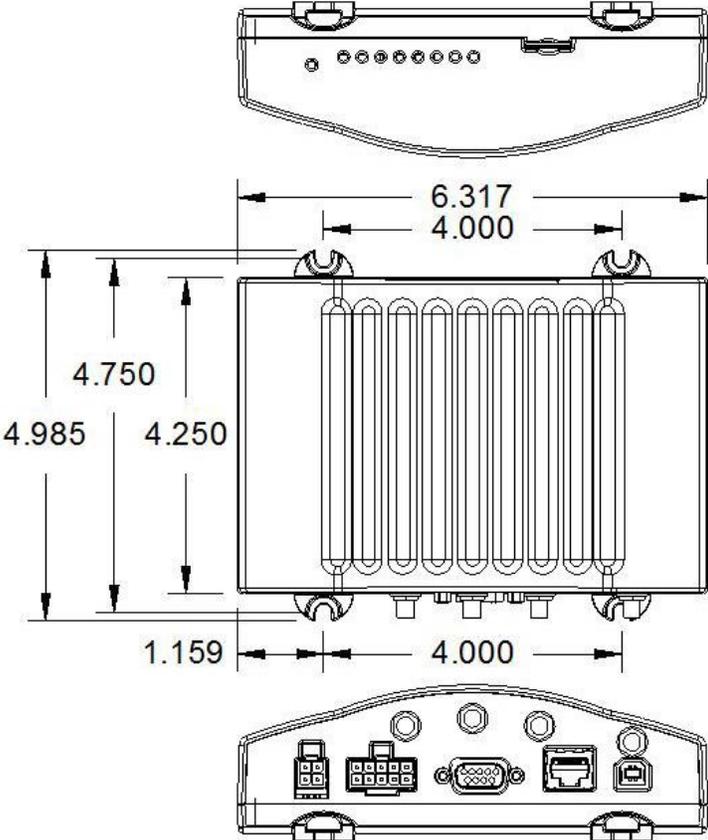

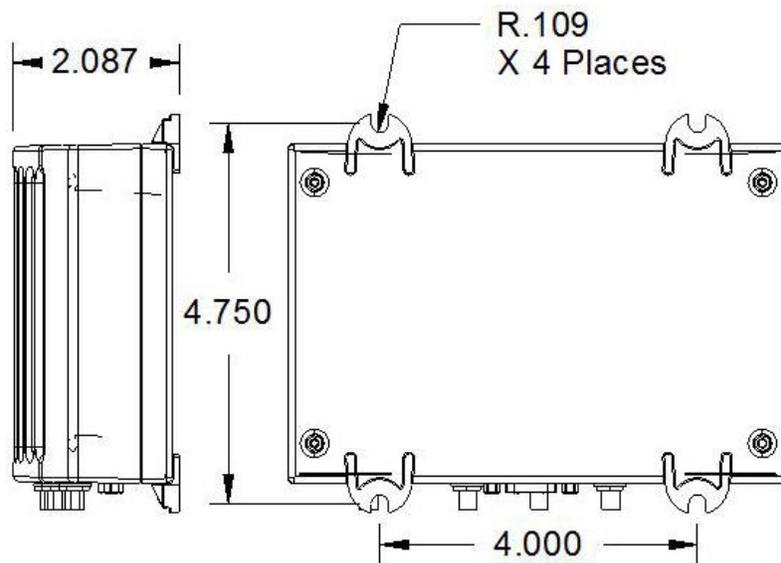

### 1.3.3 Mechanical specifications BT-6000

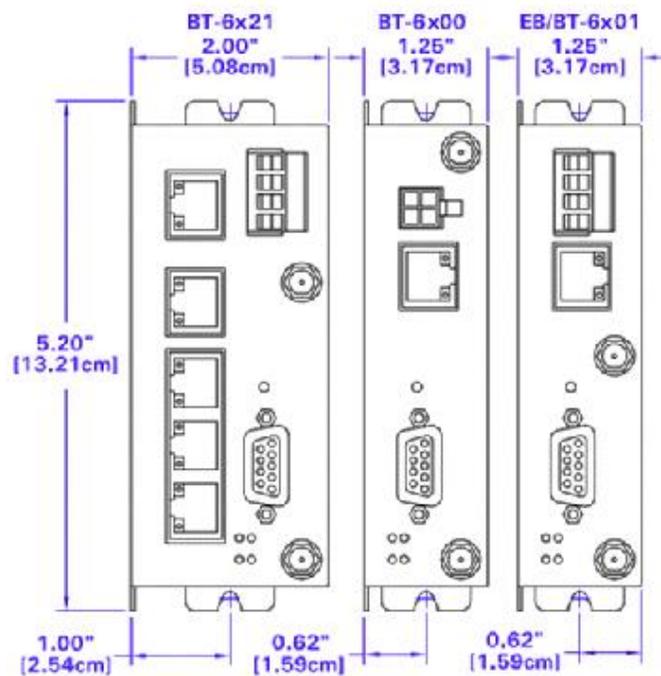

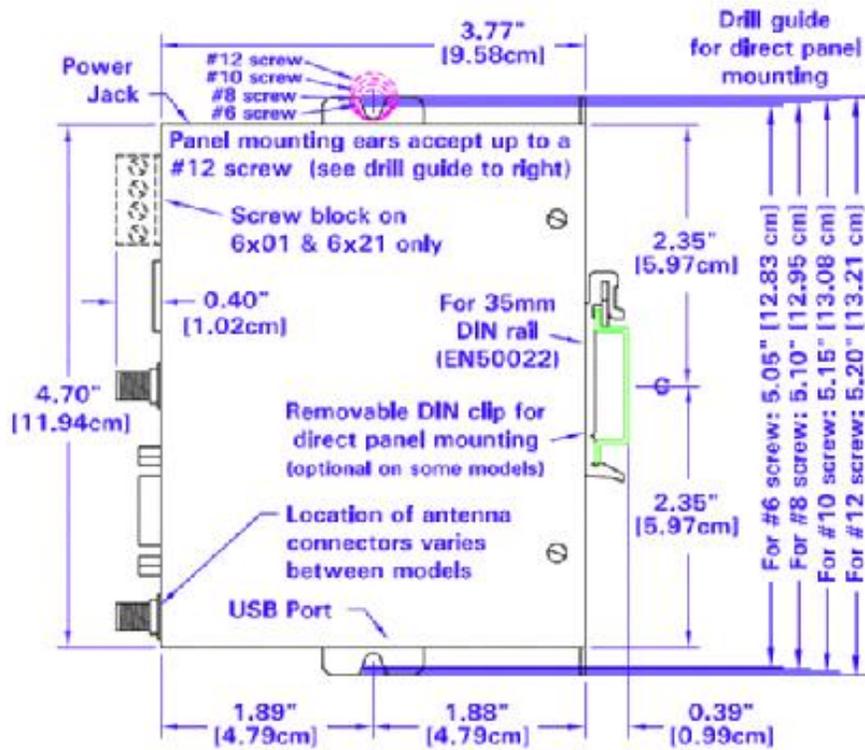


### 1.3.4 Power specifications and consumption

Power is supplied to the modem via:

- 4-pin Molex connector for the BT-6x00 and BT-5x00v2 models
- 4-pin screw terminal for the BT-6x01, BT-6x01EB and BT-6x21 models
- DC 2.5mm barrel plug for all BT-6000 models
- Power over Ethernet for all BT-6x01EB models

#### 1.3.4.1 4-pin Molex Connector (BT-5xxv2)

Power is supplied to the modem via the 4-pin Molex connector on the rear panel for BT-5x00 v2 models. The pins are described as follows:

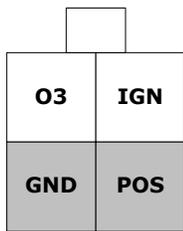


Power connector  
(facing modem)

Table 3 - 4-pin Molex connector (BT-5000v2)

Pin	Name	Description
1	GND	Ground
2	POS	Power supply input (8 to 30 VDC)
3	IGN	Ignition sense input (switches modem on or off)
4	O3	Digital Output 3

#### 1.3.4.2 4-pin Molex Connector (BT-6x00)

Power is supplied to the modem via the 4-pin Molex connector on the front panel for the BT-6x00 models. The pins are described as follows:

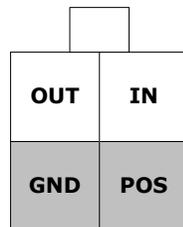

Power connector  
(facing modem)

Table 4 - 4-pin Molex connector (BT-6x00)

Pin	Name	Description
1	GND	Ground
2	POS	Power supply input (8 to 30 VDC)
3	IN	Digital and analog input
4	OUT	Digital Output

### 1.3.4.3 4-pin Screw Terminal (BT-6xx1)

Power is supplied to the modem via the 4-pin Screw Terminal on the front panel for the BT-6xx1 models. The pins are described as follows:



Power connector  
(facing front)

Table 5 - 4-pin screw terminal (BT-6xx1)

Pin	Name	Description
1	GND	Ground
2	PWR+	Power supply input (8 to 30 VDC)
3	OUT	Digital output
4	IN	Digital and analog input

### 1.3.4.4 DC 2.5mm Barrel Adapter

Power is supplied to the modem via the barrel adapter on the left side of all BT-6000 series modems. The contacts are described as follows:



Power connector  
(facing left side)

Table 6 – DC 2.5mm Barrel adapter (BT-6000)

Pin	Name	Description
Sleeve	GND	Ground
Tip	PWR+	Power supply input (8 to 30 VDC)

#### WARNING:

DC 2.5mm Barrel Adapter shall not be used in hazardous locations.

### 1.3.4.5 Power specification

Power input to the modem is protected against reverse polarity and over-voltage. The modem's power consumption is as follows:

Typical power consumption (Watts)			
Model	Standby	Transmitting minimum	Transmitting maximum
BT-5600v2	1.5	2.1	3.0
BT-5800v2	1.5	2.7	5.1
BT-6401	1.4	2.0	5.0
BT-6421	2.7	3.4	6.4
BT-660x	1.4	2.0	2.9
BT-6621	3.0	3.6	4.5
BT-680x	1.4	2.6	5.0
BT-6821	3.0	4.2	6.6
BT-670x	1.6	2.6	6.9
BT-6721	3.3	4.3	8.7

Wiring instructions are provided in the [Hardware Installation](#) section.

All modems are equipped with protection for reversed polarity and power surges over 33 volts. The modems are equipped with an internal 3 Amp fuse. When using the 4 pin Molex connector / power accessory cable supplied by BlueTree Wireless, an extra 2 Amp fuse is also included (5600v2, 5800v2).

### 1.3.5 Modem views (Red Lion labels)

<p><i>Standalone GPS With Wi-Fi(5x30 only)</i></p>	 <p style="text-align: center;"><b>BT-5xx0v2</b></p>	<ul style="list-style-type: none"> <li>• BT-5600v2</li> <li>• BT-5800v2</li> <li>• BT-5700v2</li> <li>• BT-5730v2</li> <li>• BT-5630v2</li> <li>• BT-5830v2</li> </ul>
<p><i>4-pin power connector</i></p>	 <p style="text-align: center;"><b>BT-6x00</b></p>	<ul style="list-style-type: none"> <li>• BT-6600</li> <li>• BT-6700</li> <li>• BT-6800</li> </ul>
<p><i>Screw-block power connector</i></p>	 <p style="text-align: center;"><b>BT-6x01</b></p>	<ul style="list-style-type: none"> <li>• BT-6401*</li> <li>• BT-6601</li> <li>• BT-6701</li> <li>• BT-6801</li> </ul>
<p><i>Screw-block power connector &amp; PoE power input</i></p>	 <p style="text-align: center;"><b>BT-6x01EB</b></p>	<ul style="list-style-type: none"> <li>• BT-6401EB*</li> <li>• BT-6601EB</li> <li>• BT-6701EB</li> <li>• BT-6801EB</li> </ul>
<p><i>Ethernet Switch</i></p>	 <p style="text-align: center;"><b>BT-6x21</b></p>	<ul style="list-style-type: none"> <li>• BT-6421*</li> <li>• BT-6621</li> <li>• BT-6721</li> <li>• BT-6821</li> </ul>

• The BT-64xx series modems are not equipped with a diversity antenna connector

### 1.3.6 Modem views (BlueTree labels)

<p><i>Standalone GPS</i></p>	 <p>BT-5x00v2</p>	<ul style="list-style-type: none"> <li>• BT-5600v2</li> <li>• BT-5800v2</li> </ul>
<p><i>4-pin power connector</i></p>	 <p>BT-6x00</p>	<ul style="list-style-type: none"> <li>• BT-6600</li> <li>• BT-6800</li> </ul>
<p><i>Screw-block power connector</i></p>	 <p>BT-6601</p>	<ul style="list-style-type: none"> <li>• BT-6401*</li> <li>• BT-6601</li> <li>• BT-6801</li> </ul>
<p><i>Screw-block power connector &amp; PoE power input</i></p>	 <p>BT-6x01</p>	<ul style="list-style-type: none"> <li>• BT-6401EB*</li> <li>• BT-6601EB</li> <li>• BT-6801EB</li> </ul>
<p><i>Ethernet Switch</i></p>	 <p>BT-6x21</p>	<ul style="list-style-type: none"> <li>• BT-6421*</li> <li>• BT-6621</li> <li>• BT-6821</li> </ul>

• The BT-64xx series modems are not equipped with a diversity antenna connector

## 1.3.7 Indicators Lights (LED)

Table 7 – LEDs

LED	Status	Corresponding State
Power	OFF	Modem is powered off
	ON	Modem is powered on
	FLASH	Firmware error
Signal	OFF	No signal available or signal strength is below -100 dBm
	ON	Excellent signal strength = greater than -69 dBm
	FLASH	Fast: Every 300ms = -79 to -70 dBm
		Medium: Every 600ms = -89 to -80 dBm
Slow: Every 1200ms = -99 to -90 dBm		
WAN	OFF	Cellular connection is not established
	ON	Cellular connection is established - no network data activity
	FLASH	Cellular connection is established - with network data activity
RS232	OFF	Serial connection is not established
	ON	Serial connection is established - no data activity with host
	FLASH	Serial connection is established - with data activity with host
GPS (BT-5x00v2)	OFF	No position fix available
	ON	Position fix available

## 1.3.8 Data Interface Specifications: Serial, Ethernet & USB

### 1.3.8.1 Ethernet Port

The modem's 10/100Mbps Ethernet port is compliant with the EIA-568 standard. The modem's ports are autosensing so they can be used with either a straight or crossover RJ45 cable to connect to host ports.

The BT-6x21 features a 5-port Ethernet switch allowing connectivity to multiple local devices.

### 1.3.8.2 USB Device Port

This is a USB 2.0 Device interface on a Type B (BT-5x00v2) or Mini B (BT-6xxx) connector. It offers Ethernet-over-USB functionality using the RNDIS driver for Windows XP and Windows Vista Operating systems only. The BlueTree RNDIS driver must be installed before the USB interface can be used. The driver is automatically installed with BlueTree Device Manager or you can obtain the driver at [www.redlion.net](http://www.redlion.net) and install it manually.

### 1.3.8.3 Serial Port (DB9)

The modem's serial port is an RS232 DCE, compliant with EIA-232 standard. The connector used is DB9 female and is shown in the illustration below.

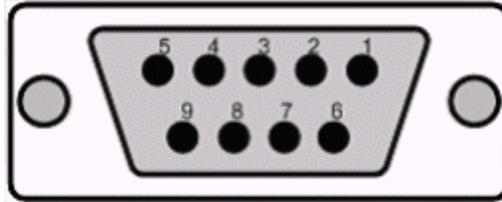


Figure 3 – Serial connector (looking at back of modem)

For further serial wiring information, refer to the [Hardware Installation](#) section.

### 1.3.9 RESET button functions

Table 8 – Reset button functions

Mode	Pattern	Description
Hard reset	Press and hold for less than 3 seconds	Standard reboot
Factory restore	Press and hold between 3 and 10 seconds RS232 LED flashes quickly	Overwrites user configuration with the default factory settings
FW upgrade	Press and hold between 10 and 15 seconds WAN LED flashes quickly	Puts the modem in advanced firmware upgrade mode by restarting the modem and running the bootloader only. Do not use this mode unless instructed to by BlueTree Technical Support.
USB pass-through	Press and hold for longer than 15 seconds Signal LED flashes quickly	Puts the modem in main pass-through mode to the RF module, allowing CCT provisioning and PST support. Do not use this mode unless instructed to by BlueTree Technical Support.

## 2 BlueVue Device Manager (BVDM)

The BlueTree BT-5000v2 and BT-6000 series modems can be configured using BlueVue Device Manager version 1.76 or later. This software application is available as a free download at [www.redlion.net](http://www.redlion.net). Later sections of this guide will refer to configuration options in this software. For more in-depth information on using BVDM, refer to the *BlueVue Device Manager User's Guide*. It can be accessed from within BVDM itself by clicking the Help button, or downloaded separately at [www.redlion.net](http://www.redlion.net).

BVDM is a Graphical User Interface for modem configuration and administration that allows the user to:

- Activate the modem (program account information) for use on the cellular network
- Register the modem on the cellular network (WAN Setup)
- Configure operation parameters (such as LAN setup or GPS)
- Monitor diagnostic and status information
- Perform firmware upgrades to the modem

## 2.1 Connecting to the modem

Should you run into any issues connecting to the modem, refer to the [BlueVue Device Manager Troubleshooting](#) appendix.

Click on **Tools > Settings > Connection tab** to select the interface your PC will use to connect to the modem.

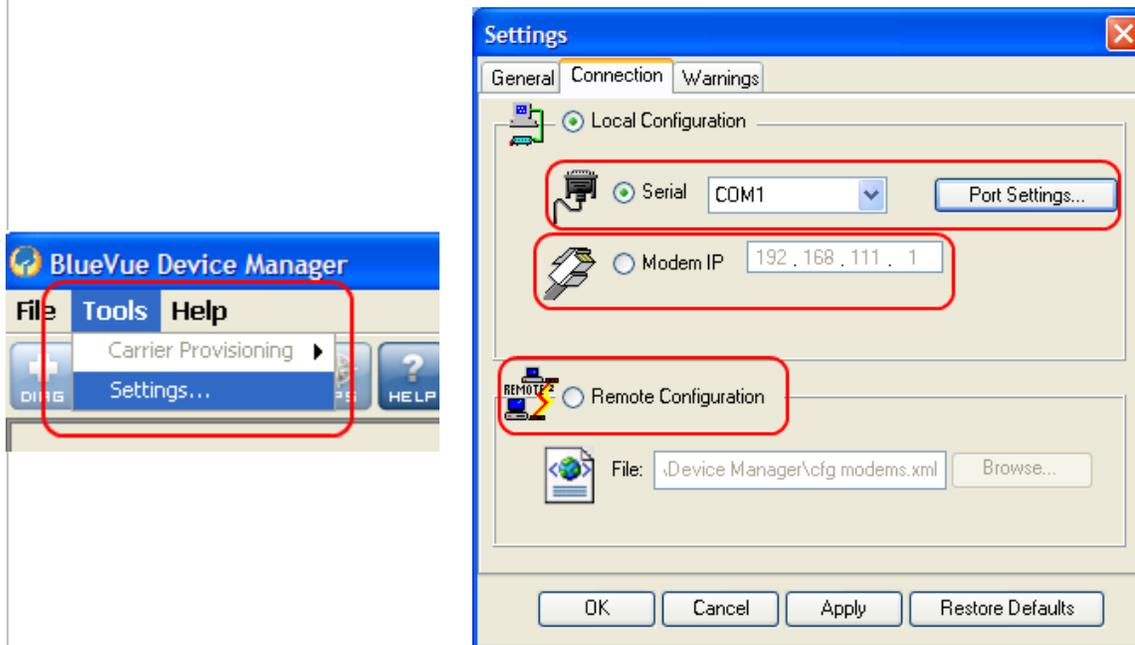


Figure 4 – The different ways to connect to a modem

### 2.1.1 Using a serial cable:

- 1) Select **Serial**
- 2) Select the **COM** port in the dropdown list, then click OK

### 2.1.2 Using an Ethernet or USB cable:

- 3) Select **Modem IP**
- 4) Enter the appropriate modem IP then click **OK**. By default, the DHCP-assigned IPs will be **192.168.0.1** for **Ethernet** and **192.168.111.1** for **USB**. If using USB, the BlueTree RNDIS driver must be installed as explained in the [Data Interface Specifications](#) section.

### 2.1.3 Connecting to a remote modem:

- 5) Select **Remote Configuration** and click OK. A new panel will open to the left of BlueVue Device Manager.
- 6) Right-click **Available Modems** in the panel
- 7) Click **Add...**
- 8) Enter the modem's information, then click OK. The description is optional.

- 9) The modem will be added to the list of Available Modems, which will be saved for easy access in the future. **Double-click the modem name** in order to connect to it.

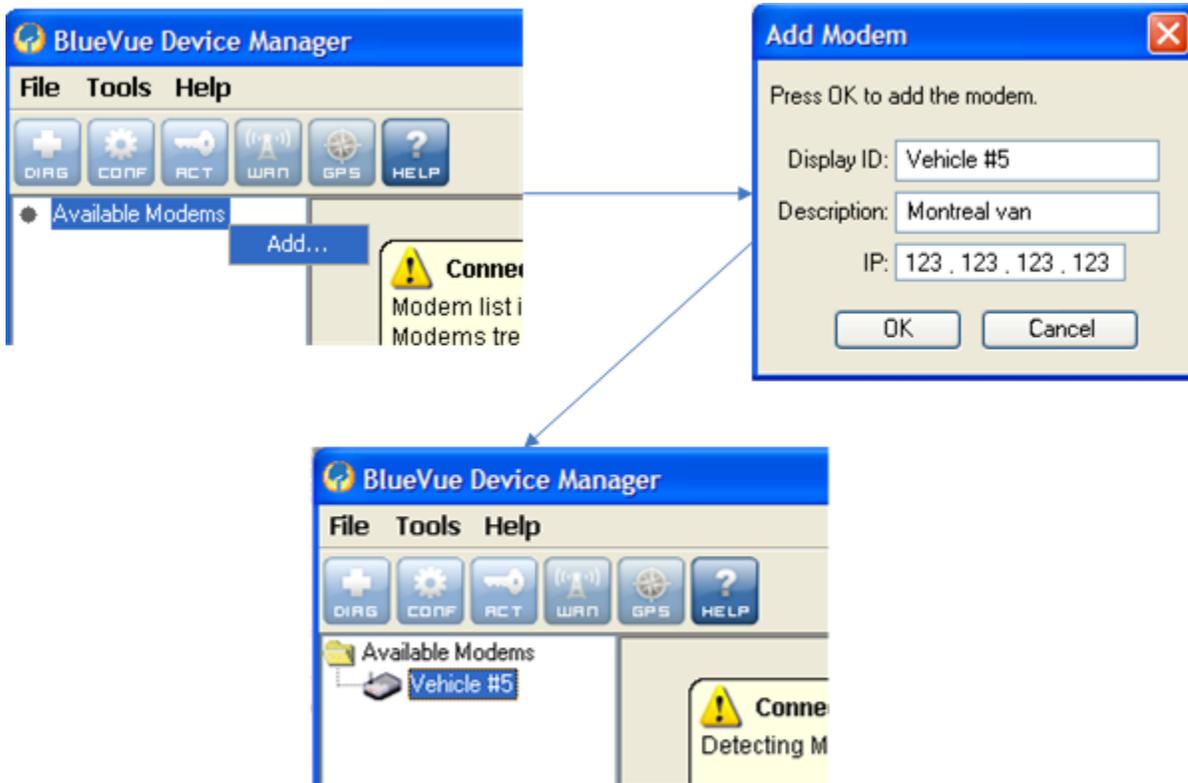


Figure 5 – Connecting to a remote modem

## 2.2 Software overview



### **Modem Diagnostic**

This screen displays various technical information pertaining to the modem's state.



### **Modem Configuration**

This screen allows the user to configure the modem to suit the application requirements.



### **Modem Activation**

This screen is where the user performs cellular account activation so that the modem may connect to the cellular network.



### **Modem WAN Settings**

This screen allows the user to set the connection profile on the modem, such as the user name and password of the account.



### **Modem GPS**

This screen allows the user to configure the modem for basic GPS reporting (BT-5x00v2 only).



### **Help**

This button opens the *BlueVue Device Manager User's Guide*, a document that explains every parameter of BlueVue Device Manager in detail.

## 3 AT Commands

The BlueTree BT-5000v2 and BT-6000 series modems can be configured and managed using AT commands.

AT is a command line interface allowing full control over the modem functionalities and diagnostics.

The AT commands are described in the AT command reference document available from [www.redlion.net](http://www.redlion.net).

AT commands allow for the creation of configuration scripts used to configure a fleet of modems with the same settings.

The AT command interface may be protected by a password.

### 3.1 Access

AT commands interface is accessible via:

- the modem serial port (when not in DUN, Serial IP or Serial pass-through). The default serial settings are:
  - o 115200 bauds
  - o 8 bits data
  - o no parity
  - o one stop bit
  - o hardware flow control
- a TCP/IP connection to port 6070 over:
  - o LAN Ethernet
  - o LAN USB
  - o WAN (remote access)

The modem accepts up to two concurrent TCP/IP connections to port 6070 (in addition to the serial port). When an additional connection is attempted, the idlest connection is dropped.

A terminal emulation application such as Hyperterminal, PuTTY or teraterm is required. Terminal emulation applications can be freely downloaded from the internet. For TCP/IP access, terminal emulation software or a telnet client software can be used.

Please refer to 12.5 Sending AT Commands for more details.

## 4 Activation & WAN Setup

### 4.1 Activation (CDMA modems only)

A modem must be activated and configured before it can be used on the cellular network. The steps below outline how to activate a modem. To configure the modem to connect to the wireless network after activation has been performed, skip to the next section.

#### 4.1.1 Obtaining a cellular account for the modem

Contact a cellular service provider or cellular dealer and request a CDMA account with the packet data service option for 1xRTT, 1xEV-DO, or 1xEV-DO Rev. A. The provider will require the Electronic Serial Number (ESN) of the modem. The ESN is located on the label under the modem as well as on the modem's packaging box.

The cellular service provider will then provide the information required to activate the modem.

#### **IMPORTANT**

Ask your cellular service provider whether the carrier blocks incoming connections. If they do, you will be unable to communicate with the modem remotely unless you ask the service provider to allow incoming connections to your application's TCP and UDP ports. If possible, ask them to open the following ports as well: TCP 20 and TCP 21 (used for firmware upgrades), TCP 5070 (used by BlueVue Device Manager), and TCP 6070 and 6073 (used for AT command configuration and troubleshooting).

#### 4.1.2 Programming the account information into the modem

The steps required to program the account information into the modem are unique to each carrier. The **Quick Start Guide** booklet included in the modem package contains a step-by-step walkthrough for activating the modem. The latest version of the Quick Start Guide is also available for download at [www.redlion.net](http://www.redlion.net).

#### 4.1.3 Confirming the success of activation

Once the activation process above is complete, navigate to **WAN (WAN Settings)**. The modem's phone number should be displayed at the top left as shown in Figure 6.




Figure 6 – Confirming the success of activation

## 4.2 WAN Setup

After the modem has been activated, it must be configured in order to authenticate for use with the cellular network.

### 4.2.1 Enter the account information

Navigate to **WAN (WAN Settings)** to configure the WAN connection once the modem has been activated.

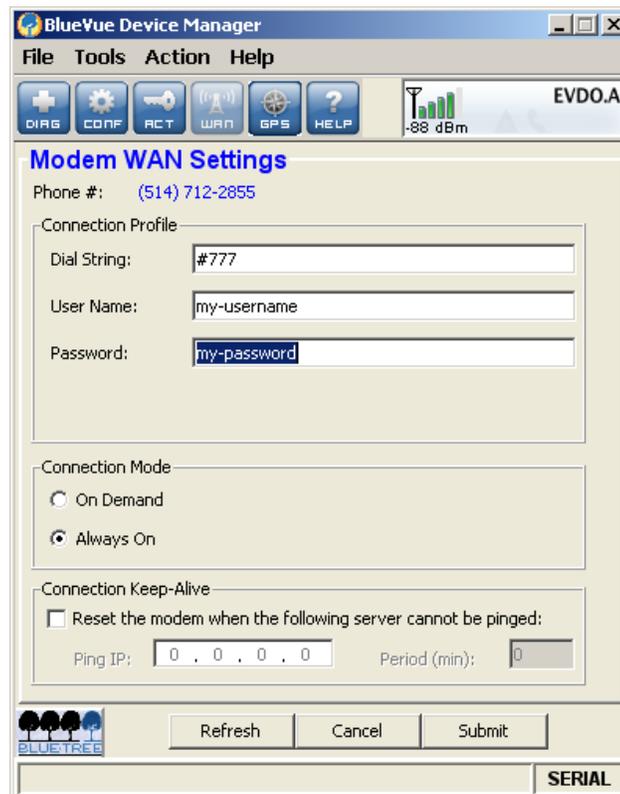

*Figure 7 – Editing the account information*

- 1) Enter the **Dial String**:
  - **#777** for CDMA modems
  - **\*99#** for HSPA modems (Bell Mobility and Telus)
  - **\*99\*\*\*1#** for other GSM modems (EDGE and HSPA)
- 2) Enter the User Name and Password if provided by your cellular carrier otherwise, leave them empty.
- 3) Select **Always On** or On Demand (explained below) depending on the desired connection initiation behavior.
- 4) Enter **APN** information that was provided to you if you are using a **GSM modem**. The APN field is only shown when BVDM is connected to a GSM (EDGE and HSPA) modem.

When the modem is set to Always On, it will attempt to maintain a permanent connection to the cellular network on its own. Most applications will require the modem to be remotely accessible at any time, and will require the modem to be set to Always On.

When the modem is set to On Demand, the modem does not connect to the cellular network unless told to by the attached terminal. If disconnected from the cellular network, it will not attempt to reconnect. The most common On Demand scenario is when using the serial port in order to establish a PPP session through a Dial-Up Networking (DUN) connection.

Unless you are sure the modem should be set to On Demand, the modem should be set to **Always On**.

#### **4.2.2 Testing the connection**

Once you've finished entering the settings, and once a connection is established (depending on the connection initiation behavior described above), navigate to **DIAG (Modem Diagnostic)** and click on **Refresh button**: the modem's **WAN IP** should be displayed as outlined in Figure 8. This is the IP address that has been assigned to the modem by the cellular carrier. At this time, the modem's WAN light will stay on as long as the connection is maintained.

##### **Notes:**

- HSPA/EDGE: no activation is required since all the connection and network information is contained in the SIM card.
- HSPA/EDGE: Please note that the modem needs to be reset after a SIM card is inserted.
- Please note that some carriers prefer to have the modem phone number hidden. In this case, the modem phone number is not displayed in BVDM.

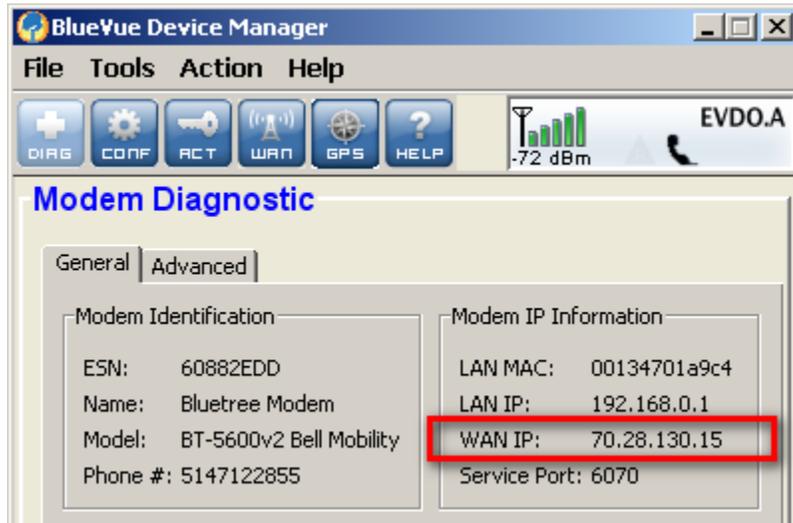


Figure 8 – Testing the connection

## 5 LAN Setup

### 5.1 Ethernet and USB LAN

Computers and devices that use the modem's Ethernet and USB connectivity experience much higher transfer speeds and they employ all the benefits of TCP/IP communication.

### 5.2 LAN configuration

Whether an Ethernet or USB cable is used, it is essential that both the modem and the attached device be within the same LAN subnet for IP communication to take place. By default, the modem has a DHCP server running, which will initially assign the following IP address to the attached device (providing the device is set to use DHCP):

Table 9 – DHCP IP assignment

	Modem IP	Host IP
<b>Ethernet</b>	192.168.0.1	192.168.0.4
<b>USB</b>	192.168.111.1	192.168.111.20


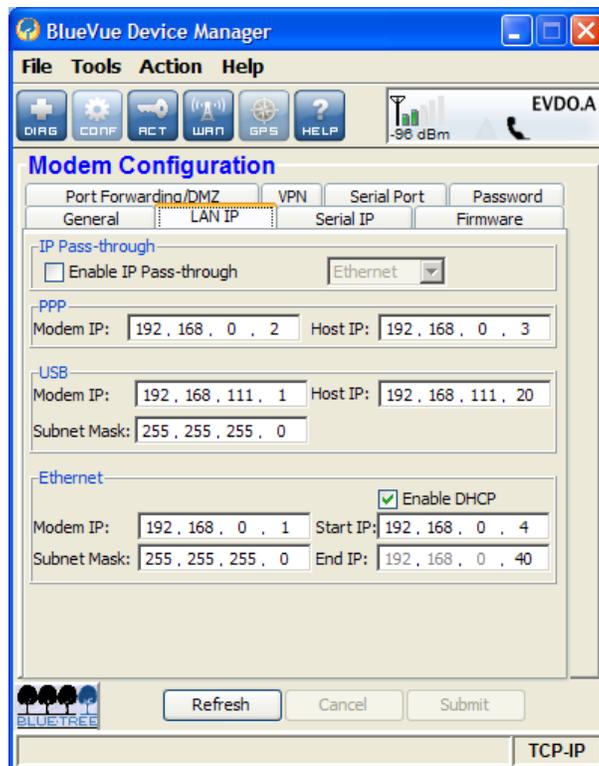


Figure 9 – Default LAN IP configuration

If the attached device must use a specific (static) IP, then the modem's LAN configuration must be changed so that the

modem's IP lies in the same subnet as the device. Navigate to **CONF (Modem Configuration) > LAN IP** and change the parameters under Ethernet or USB.

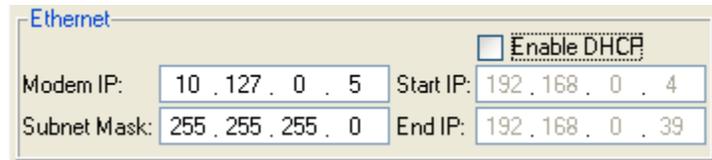

Ethernet			
Modem IP:	10 . 127 . 0 . 5	Start IP:	192 . 168 . 0 . 4
Subnet Mask:	255 . 255 . 255 . 0	End IP:	192 . 168 . 0 . 39
<input type="checkbox"/> Enable DHCP			

Figure 10 – Sample modem configuration for communicating with a device that has the IP 10.127.0.17

### 5.3 Wireless(WiFi)

All configuration of the integrated Wi-Fi feature in the BT-5x30 is done via AT commands only. For configuration of this feature please refer to the separate AT Command Reference, available at <http://support.sixnet.com>

### 5.4 DHCP server

As mentioned above, the modem has a DHCP server which automatically assigns an IP to the attached device. If an Ethernet hub or switch is connected to the modem's Ethernet port, the modem will assign an IP address to each device connected to the hub or switch, for a maximum of 254 devices, provided the devices are configured as DHCP clients ("Dynamic" or "Automatic" IP configuration). The DHCP server can be configured or turned off in **CONF (Modem Configuration) > LAN IP** as shown above.

### 5.5 Dial-up Networking (DUN) over serial

**Note:**

Regardless of the modem type, using a serial cable will cap the bandwidth at 115200 kbps. The serial port will be a bottleneck in terms of performance, as it will reduce the data throughput considerably to less than 3% of its maximum potential. Whenever possible, use an Ethernet or USB connection to take full advantage of throughput.

Some terminals do not have RJ45 Ethernet or USB connectors and require using a DB9 RS232 standard serial connector to interface with the modem.

- If the attached device is not programmable (smart), then you cannot use DUN, and will have to use the Serial IP feature to communicate with the device. Refer to the [Serial IP](#) section for details.
- If the modem will be used with a programmable device that can make PPP connections, then refer to that device's documentation to create the dial-up session. The phone number to dial will be the same as the one programmed in the Dial String of the WAN setup. The username and password, if any, will be those provided by your cellular service provider.
- If the modem is used with a PC making a PPP connection, then a standard modem driver on the COM port to which the modem is physically connected must be installed, and then a dial-up connection running on that driver must be created. This dial-up connection will dial the modem so that a PPP session is established between modem and PC. Meanwhile, the modem will make a PPP session of its own to connect to the network. For a walkthrough on creating a DUN connection in Windows, refer to the [Dial-Up Networking in Windows](#) appendix.

## 6 IP Networking Features

As mentioned previously, the modem acquires an external public or private IP address (WAN IP, or Wide Area Network IP) from the cellular network upon establishing a connection. A remote user can communicate with the modem or a host behind the modem; however the appropriate port-forwarding, DMZ or IP pass-through and LAN IP configuration must be set on the modem. Read on for a description of each configuration option.

Some carriers disable remote access as a security measure. If you are certain that the modem is on the cellular network (i.e., it has acquired a WAN IP) and that the local network is set up properly, but you cannot reach the modem remotely, confirm with the carrier that incoming IP data traffic is allowed on the required TCP or UDP port. Read the [BlueVue Device Manager Troubleshooting](#) section for more details.

### 6.1 Port-forwarding

Since the modem is a network address translation (NAT) enabled router, the remote computer connecting to the modem's cellular WAN IP cannot access devices/servers on the modem's LAN if the modem is not specifically configured to forward the appropriate ports to the LAN devices/servers. Port-forwarding, or tunneling, is the act of relaying an incoming packet to one or more local destinations depending on the port(s) through which the packet came.

The main use of port-forwarding is to allow an external user to reach a port on a private IP address from the outside via a NAT. This allows remote computers to connect to a specific computer within a private LAN, depending on the port used to connect.

To set up the modem's port forwarding rules, navigate to **CONF (Modem Configuration) > Port Forwarding/DMZ**.

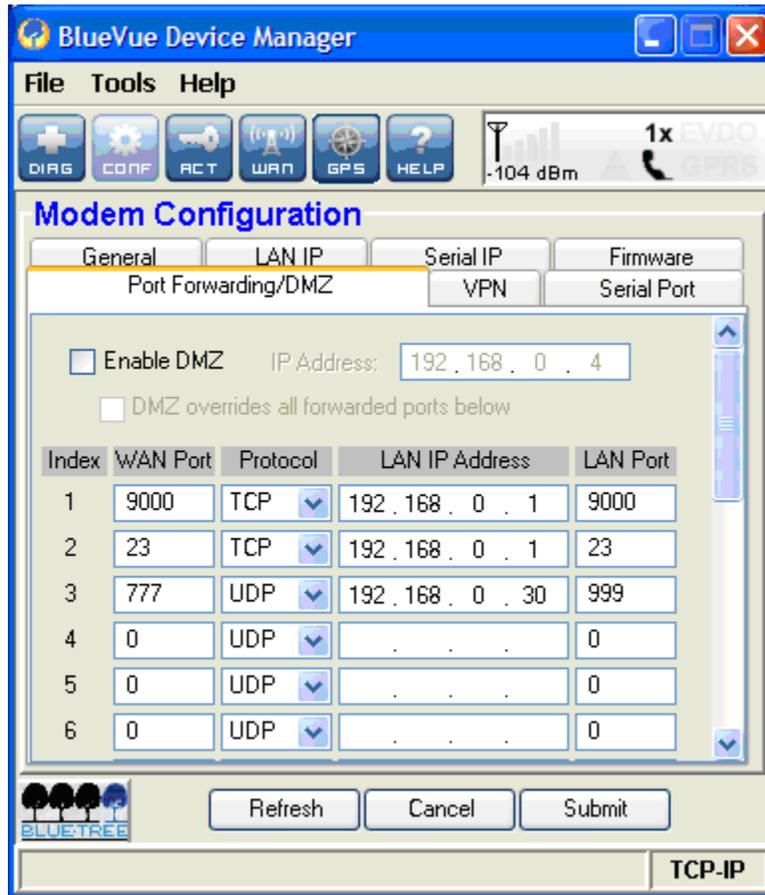


Figure 11 – Port-forwarding entries

The WAN Port is the destination port number used by the remote computer and the LAN Port is where the data is forwarded to. Typically the WAN port and LAN port are the same; however any port can be used on the WAN side, as long as it points towards the correct LAN port. Select the appropriate protocol (TCP or UDP), and submit the new settings.

## 6.2 DMZ

This feature, when enabled, instructs the modem to port-forward *all* incoming traffic to a single IP destination on the LAN. An exception will be made for traffic coming on the ports designated by the port-forwarding rules (this would be ports 9000, 23, and 777 in Figure 11). This exception can be overridden by checking the “DMZ overrides all forwarded ports below” checkbox.

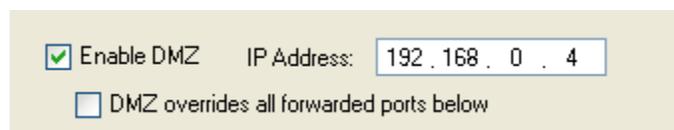


Figure 12 – Enabling DMZ

DMZ is ideal in situations where there is already a server on the LAN that handles port-forwarding, as it avoids having to re-program all the port-forwarding rules into the modem. It is also practical when the user does not know which ports his local device listens on, and just wants everything to work with minimal configuration.

DMZ can be enabled at **CONF (Modem Configuration) > Port Forwarding/DMZ**.

### 6.3 IP pass-through

**Note**

When IP pass-through is enabled, both port-forwarding and DMZ are disabled.

When this feature is enabled, the modem will disable NAT and assign its WAN IP address to the attached host. This will solve VPN authentication issues that are caused by NAT. The modem will remain reachable through its reserved TCP and UDP ports.

To enable IP pass-through, navigate to **CONF (Modem Configuration) > LAN IP** and select the data interface to perform pass-through on, then check the “Enable IP Pass-through” checkbox.

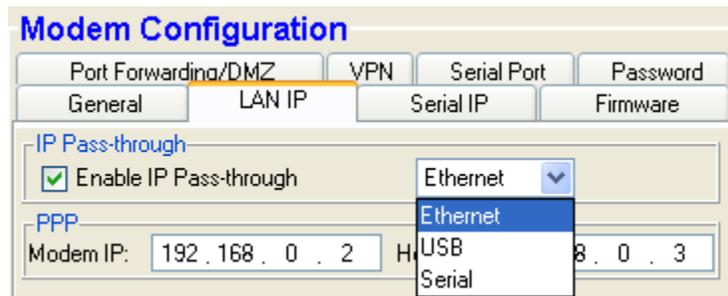


Figure 13 – Enabling IP passthrough

If the host is attached to the modem via an Ethernet cable, then the host must have DHCP enabled (i.e., it should be perform automatic IP negotiation instead of using a pre-defined static IP). If the host is attached to the modem via a serial cable, IP pass-through will only activate when the host creates a PPP session to the modem.

Once IP pass-through is enabled the default IP settings will alter as follows:

	Router Mode	IP Pass-through Mode
Host IP Address	192.168.0.4	aaa.bbb.ccc.ddd (WAN Address)
Modem IP Address	192.168.0.1	aaa.bbb.ccc.1 or .2(if ddd=1)

**Note**

Enabling or disabling IP pass-through reset the concerned interfaces and may stop established connections (e.g. BlueVue Device Manager).

To work around this issue, do not enable/disable IP pass-through on the interface used for the device configuration.

**Note**

This mode allows only one IP address to be assigned to the first connected device via DHCP (This configuration is not recommended for BT-6x21).

## 6.4 Dynamic IP registration

This feature allows the modem to report a message to a user-configurable IP address every time its WAN IP address changes.

It is useful when the cellular account is associated with a dynamic IP address. Since the WAN IP address will be changing regularly, it will be impossible for the user to know which WAN IP address is assigned to the modem. With Dynamic IP Registration enabled, the modem will notify a remote server of the new WAN IP address as well as the modem's ESN in hexadecimal format. The IP Registration packet can be sent using either TCP or UDP.

To configure Dynamic IP Registration, navigate to **CONF (Modem Configuration) > General**, and set the destination IP address and port. The registration timer is a value (in minutes) that controls how often the modem should report its IP to the server. If it is set to zero, the modem will report its WAN IP address upon boot-up or upon acquiring a new IP address from the cellular carrier after losing the cellular connection. If it is set to a value between 1 and 65535, then it will report its ESN and WAN IP regularly at the specified interval.

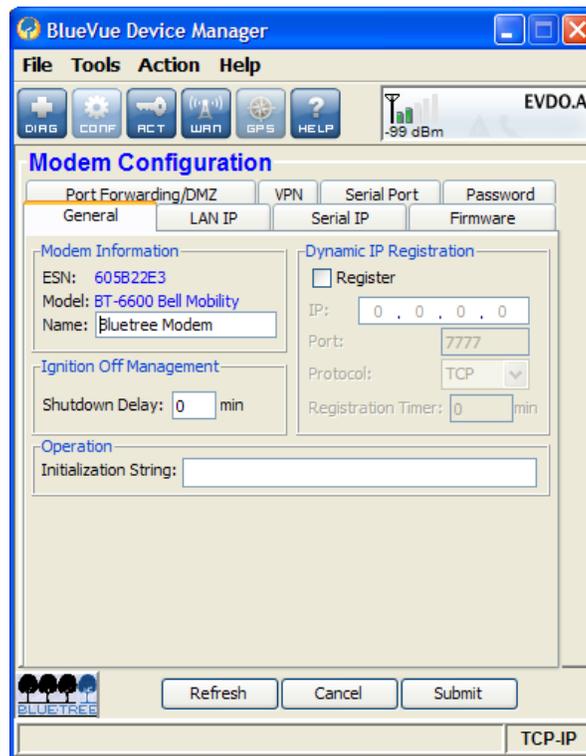


Figure 14 – Enabling Dynamic IP Registration

## 6.5 IP Security (IPSEC)

The modem supports up to 10 IPSEC VPN tunnels used to secure communications with remote servers. Please refer to the "Getting Started with IPSEC" application notes for further details.

Note

IP Security can only be configured and managed via AT commands.

## 6.6 Access Control List (ACL)

The modem can be configured with Access Control List to prevent un-authorized incoming IP traffic. Please refer to the "Getting Started with ACL" application notes for further details.

### Note

ACL cannot only be configured and managed via AT commands.

## 6.7 Password protection

This feature allows administrators to restrict unauthorized users from configuring the modem by requiring a password whenever the modem's configuration ports are accessed.

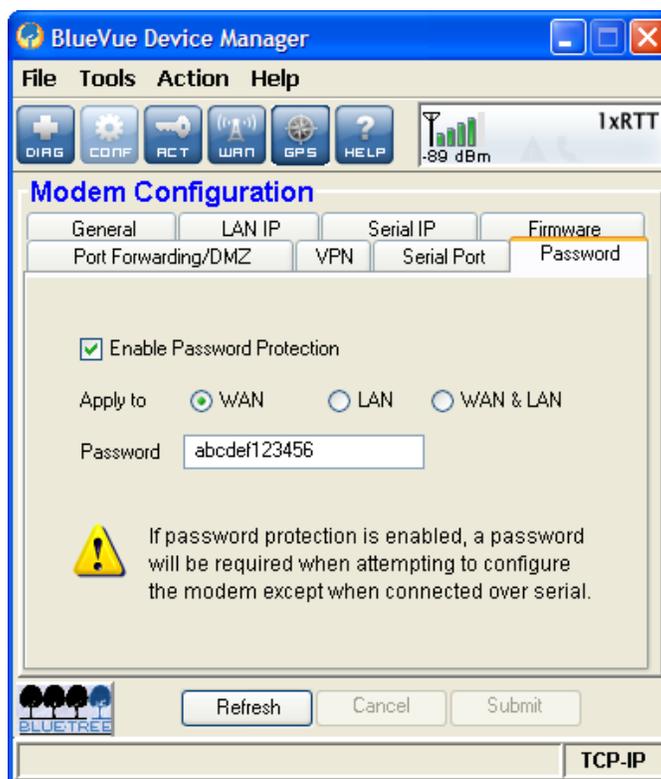


Figure 15 – Enabling password protection

To enable password protection:

- 1) Navigate to **CONF (Modem Configuration) > Password** and check the "Enable" box.
- 2) **Select the interfaces to prompt for a password on.** The WAN interface (remote connections) is the most commonly password-protected interface, however some users may wish to password-protect both the WAN & LAN interfaces. Note that the modem cannot prevent configuration changes made from its serial port.
- 3) Finally, **set the modem password.** The password must be a case-sensitive string that is 6-30 characters long.

4) Click **Submit** to save the changes.

## 7

## Serial IP

This feature allows communication over the cellular network in two common setups. The first is a server communicating with a remote serial-only device and the other, a serial-only device communicating with another remote serial-only device. Serial IP is used to emulate a direct serial connection to the attached device, or to emulate a landline modem. The modem becomes a transparent middleman routing data back and forth between the poller and the pollee. Serial IP is most commonly used in telemetry applications such as meter reading and SCADA devices.

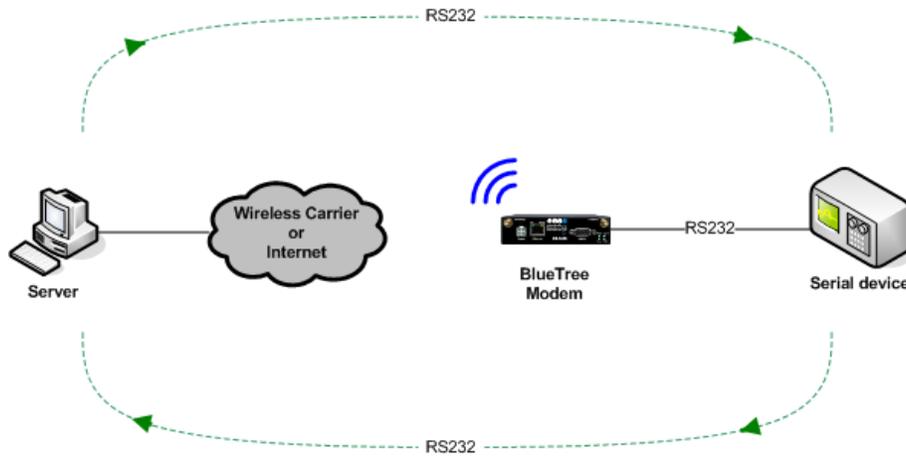


Figure 16 – Serial IP

When the modem is in Serial IP mode, IP packets intended for the attached serial device have their IP headers stripped before being passed on to the device. This means that the serial device receives raw serial data that it can understand. Inversely, when the serial device is sending data, the modem encapsulates this data in IP packets to be transmitted over-the-air to the remote destination.

When a Serial IP server is running, the modem waits until a connection is made on the defined Serial IP port, then triggers Serial IP mode. The incoming data will be relayed to the attached serial device. Any output from the serial device will be sent to the IP of the remote computer that made the connection on the port that the remote computer used to make the connection.

When using Serial IP, the modem configuration depends on the application requirements. A support note is available.

## 8 GPS

The BT-5600v2 and BT-5800v2 modems have an embedded GPS receiver which can be used to track their movement. This feature is commonly used in applications such as asset-tracking and Automatic Vehicle Location (AVL). These modems support two GPS protocols: the National Marine Electronics Association (NMEA) protocol and the Trimble ASCII Interface Protocol (TAIP).

The modem can report the fixes acquired from its GPS receiver to:

- the local serial port,
- up to two servers either local (Ethernet/USB) or remote (over the air) configured for TCP/IP or UDP/IP.
- an internal GPS data server (TCP/IP 9999).
- the internal event processor where GPS data can be embedded into BEP event messages (raw or structured).

A variety of reporting options are available, ranging from basic NMEA/TAIP timer-based reports to intelligent condition-triggered reports which leverage the modem's Event Reporting capabilities.

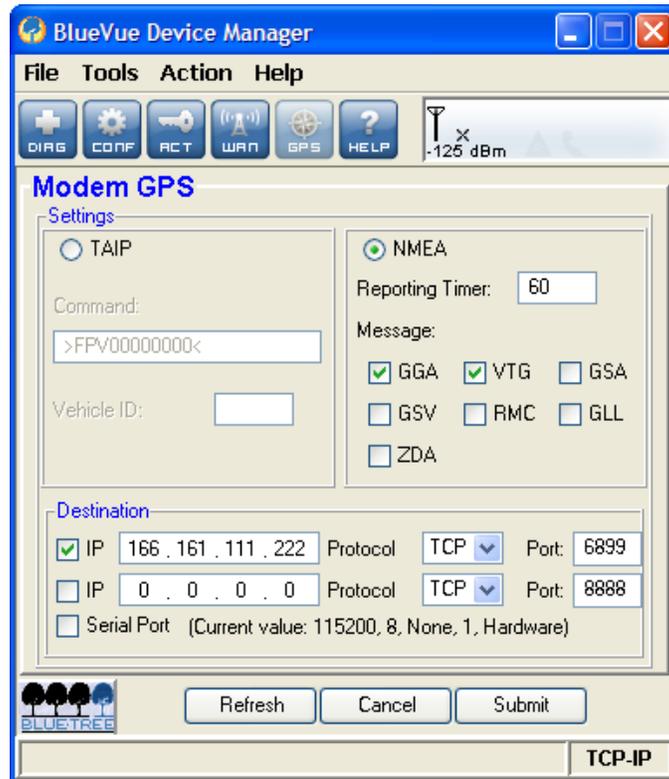


Figure 17 – GPS configuration screen

## 8.1 GPS protocols

### 8.1.1 TAIP

TAIP is configured using a single command string. Read Trimble's TAIP documentation to learn how to create a command that meets your needs.

The modem listens on UDP port 21000 for TAIP commands, allowing its configuration to be modified on the fly by software applications that support TAIP.

### 8.1.2 NMEA

NMEA uses one or more of the following seven pre-defined, fixed-format messages.

*Table 10 – NMEA messages information*

Message	Contents	Size
GGA	Time, position, and various status information	75 bytes
GLL	Latitude, longitude, and time	48 bytes
GSA	GPS DOP and active satellites	63 bytes
GSV	Active satellites in view	70 bytes
RMC	Time, date, position, course, and speed	67 bytes
VTG	Track made good and ground speed	37 bytes
ZDA	Time and date	35 bytes

Refer to Trimble's NMEA 0183 documentation for additional information.

## 8.2 Odometer

The modem can keep track of the total distance traveled by aggregating the data obtained from the GPS fixes. It calculates the distance traveled based on a straight line between the current and previous fix. By appending these calculations to a total, the modem is able to keep track of the total distance travelled. When using the NMEA protocol, the GPS fix is updated every second, so the odometer can be very accurate. However, when using the TAIP protocol, the GPS fix is acquired as per the configured fix acquisition timer. If the timer is set to a high value such as 5 minutes, then the odometer will most likely be inaccurate.

## 8.3 Configuring the modem for GPS reporting

### Note

If the modem is configured to report GPS fixes to a remote destination, then the reporting frequency determines the cellular network bandwidth consumption. A higher reporting frequency will result in higher bandwidth consumption. Plan carefully to ensure you do not exceed your monthly bandwidth plan.

The modem can be configured to report GPS in two ways:

The first is to use BlueVue Device Manager for basic GPS reporting. This allows easy configuration of timer-based GPS reports. Refer to the [Basic GPS Reporting in BlueVue Device Manager](#) appendix for a step-by-step configuration example.

The second is to use AT commands for advanced configuration. This method is more complex and can take advantage of the modem's Event Reporting capabilities (see next section). Event Reporting allows the modem to report automatically when a user-defined condition is met. Read the [Event Reporting](#) section for details.

## 9 I/O Management

BlueTree offers a complete set of AT commands to query or set its general purpose and dedicated input and output pins. This section is only meant to offer a basic outline of how the user can interact with the modem's I/Os.

The actual modem I/O depends on the model. Please refer to [1Product Overview](#) for details.

The modem's Event Reporting feature (explained in the [Event Reporting](#) section) covers I/Os as well. This can allow the automation of queries and set the modem to report to a local or remote destination when an input value reaches a certain threshold, or to take action and trigger a digital output.

### 9.1 Digital Output control

The modem's digital output(s) can be used to toggle peripheral equipment ON or OFF. Peripherals such as lights, sirens, valves, door lock mechanisms, and/or ignitions can be controlled through these I/Os.

Example of turning ON digital output 2:

```
AT+BDOSET=DO2,1
```

Example of turning OFF digital output 1:

```
AT+BDOSET=DO1,0
```

### 9.2 Digital Input state query

The modem monitors its general purpose digital input(s) as well as ignition for a change in state, along with the dedicated ignition input. The state of these inputs can be queried by sending the following AT command:

```
AT+BDIGET?
```

Sample response from modem (the actual output depends on the modem model):

```
+BDIGET: DI1,0  
+BDIGET: DI2,1  
+BDIGET: DI3,0  
+BDIGET: DI4,0  
+BDIGET: IGN,1
```

### 9.3 Analog Input value query

The modem has a 10-bit Analog to Digital Converter (ADC) which allows it to monitor all of its general purpose analog input(s) for a change in state, along with the dedicated power input. The value of these inputs can be queried by sending the following command:

**AT+BAIGET?**

Sample response from modem (the actual output depends on the modem model):

**+BAIGET: PWR,13.553**

**+BAIGET: AI1,3.056**

**+BAIGET: AI2,1.987**

**+BAIGET: AI3,0.000**

## 10 Event Reporting

Event Reporting is covered in its own document, the *I/O Management & Event Reporting Guide*. This section is meant to provide a general overview of what can be accomplished with the modem's BlueTree Event Protocol engine.

Event Reporting is used to program the modem to automatically perform an action (such as sending a report) whenever a user-defined event occurs. An event occurs, or is triggered, when the conditions that define it have been met.

Event Reporting has the same "Store and forward" feature used by the GPS reporting engine, as described in the [GPS](#) section. This ensures that no reports are lost if the modem loses its connection to the cellular network: everything is saved to memory and forwarded when the connection is reestablished.

### 10.1 Events

The event that triggers an action can be any of the following:

- A timer has finished counting down
- An analog input signal has reached a certain value
- A digital input signal has changed state
- WAN status

The BT-5600v2 and BT-5800v2 modems are equipped with a GPS receiver and can react upon these additional GPS-based event triggers:

- The modem is in motion at a particular speed
- The modem is in motion in a particular direction (heading)
- The modem is unable to acquire a GPS fix
- The modem has traveled for a set distance
- The ignition (IGN) signal state

Events can also be combined using logical statements to create more complex events. For example, a combination of the timer and speed event triggers could define an event that would trigger when a vehicle has been speeding, by defining speeding as moving at 60+ mph for more than 10 seconds. This provides a great amount of control and allows defining events that meet most if not all potential requirements.

### 10.2 Store and forward

The modems have a 512 Kbytes memory area dedicated to storing BlueTree Event Protocol reports. It can store approximately 5000 events (exact amount depends on the configuration). The event is either composed of raw GPS data (BT-5600v2 and BT-5800v2 only) or structured in a BEP message payload.

This feature will activate automatically when the modem cannot reach its reporting destination. The report destination has to be configured with TCP/IP (with or without BEP ACK) or with UDP/IP (with BEP ACK only). Events are not stored when the reporting destination is UDP/IP without BEP ACK. The modem will save the reports in its memory buffer until it is able to send them or when they are acknowledged ensuring that no event has been lost.

When Store And Forward is activated, the modem stores Event data in memory on a First In First Out (FIFO) basis. This means that if the modem is unable to transmit fixes over an extended period of time, and the memory becomes full as a result, the newest events overwrite the oldest stored events. When the connection to the report destination is re-established, the modem will send all the stored fixes to the destination.

Stored events are transferred to non-volatile memory when the IGN input signal is low (BT-5600v2 and BT-5800v2) or when the modem is shutdown via an AT command. Stored events are not lost if the modem is shutdown through ignition delay timer.

### 10.3 Actions

The modem can perform one or more of the following actions when an event is triggered:

- Change the state of one of its digital outputs
- Turn its radio-frequency module ON or OFF

### 10.4 Reports

When an event is triggered, the modem can send a report to up to 10 local or remote destinations.

All reports are custom-formatted by the BlueTree Event Protocol as defined in the *I/O Management & Event Reporting* document, so they require some manipulation on the destination end in order to be parsed properly.

A report can contain one or more of the following information:

- The modem's name and ESN
- The modem's RSSI (signal strength)
- The value of the analog and digital inputs
- The modem's odometer value (total distance traveled)
- A GPS report containing NMEA or TAIP data

#### 10.4.1 ACK

The modem can be configured to wait for confirmation (“ACK”) from the remote server that it has received the report. If this confirmation does not come, the modem will assume the report has not been received and will continue sending the same report at a configured interval until it receives confirmation of receipt.

#### 10.4.2 Sync flags

To ease the parsing of the packets on the server, the modem can set a sync flag in the beginning and end of each packet it sends.

# 11 Hardware Installation

## 11.1 Mounting the BT-5x00v2 series modem

- Horizontally mount the modem using four #6 screws pan or fillister head onto its mounting feet

## 11.2 Mounting the BT-6000 series modem

There are 3 different ways to mount a BT-6000 series modem:

- Horizontally using two #6 screws pan or fillister head onto its horizontal mounting feet
- Vertically using two #6 screws pan or fillister head onto its vertical mounting feet
- Vertically using a DIN rail clip

## 11.3 Cellular antenna

The selected cellular antenna(s) must meet the following specifications:

- Maximum rated gain of 3dBi for Cellular band and 4dBi for PCS band
- Frequency bands:
  - CDMA: Dual-band 800 & 1900 MHz
  - EDGE: 850/1900/900/1800 MHz
  - HSPA: 850/1900/2100 MHz
- Nominal 50 ohm impedance
- Voltage Standing Wave Ratio (VSWR) less than 2.5:1
- Male SMA connector

The length of the antenna cable may affect the signal strength. Choose the appropriate cable type and length. The table below provides can help pre-determine the loss to expect.

*Table 11 – dB loss per 100 feet of cable type*

Cable type	Loss per 100 feet
8216 (RG58)	31 dB
8267 (RG213)	7.6 dB
LMR-400	3.9 dB
LMR-500	3.15 dB
LMR-600	2.5 dB
LMR-1200	1.26 dB

### 11.3.1 Installation and verification

When installing the antenna, follow the FCC and Industry Canada guidelines and keep the following in mind:

- Mount the antenna(s) at least 30 cm (12 inches) from other antennas
- Do not install the antenna in a closed metallic enclosure (such as a cabinet or the trunk of a car).

Once a modem has a signal, the Signal LED indicator will start flashing according to the signal strength. Additionally, BlueVue Device Manager will display the received signal strength (RSSI) in the top right. The modem should have at the very least one bar of signal strength.

### **11.3.2 Antenna diversity**

The BlueTree 5000v2 and 6000 series modems except for the BT-64xx series have two antenna connectors available, labeled Antenna and Diversity.

- Antenna: This is the main antenna that is used for data transmission. It is mandatory to have the Antenna port connected to an antenna.
- Diversity: This is the diversity antenna, used to improve on the signal strength obtained from the main antenna. This antenna is not mandatory however it will improve throughput in low signal and fringe areas.

Diversity is a transmission technique that consists of using two separate antennas to achieve the most robust cellular signal possible. Diversity will help achieve fast, reliable data throughput in applications that require a high amount of bandwidth.

To get the best performance, the Diversity antenna should be placed at a minimum of  $\frac{5}{8}$  of a wave length away from the other antenna. Therefore, the minimum spacing for antennas in the 800 MHz frequency is  $\frac{5}{8} * 13.5'' = 8.5''$ . The diversity antenna can be spaced further away than this, ideally in increments of 13.5'': 22'', 35'', etc. For a 1900 MHz only network, the optimal distance would be  $\frac{5}{8} * 6.2'' = 4''$ .

## 11.4 Ethernet cable

If you are connecting to the modem via the Ethernet port, you will need a straight or crossover category 5 cable with two 8-pin RJ45 connectors on each end.

To visually confirm that Ethernet cabling was done properly, check the LED indication on the Ethernet port located at the rear panel of the modem. The Link LED should be on when the right cable is used.

## 11.5 USB cable

This is an Ethernet-over-USB connection which behaves like an Ethernet connection. It can only be connected to a PC with Windows XP or Windows Vista installed. If you are connecting to the modem via the USB port, you will need a Type A plug to Type B plug USB cable for the BT-5x00v2 series modems and a mini Type B plug to Type A plug for the BT-6000 series modems. In order for the USB connection to work, you need to install the BlueTree USB driver which is available at [www.redlion.net](http://www.redlion.net). The driver is automatically installed during BlueVue Device Manager setup.

## 11.6 Serial cable

The modem has all its serial port pins enabled. If all the pins are enabled on the attached serial device, it is important to know whether the device is using DTE or DCE as a communication mode.

The modem is a DCE device, so use a straight-through serial cable between the modem and a DTE device such as a terminal. Use a NULL modem cable adapter between the modem and a DCE device such as another modem.

If using custom wiring or if some pins are disabled, follow the guidelines below. The wiring will vary depending on whether the attached serial device is a DTE or DCE.

Modem		DTE	Modem		DCE
CTS	↔	CTS	CTS	↔	RTS
RTS	↔	RTS	RTS	↔	CTS
DTR	↔	DTR	DTR	↔	DSR
DSR	↔	DSR	DSR	↔	DTR
TX	↔	TX	TX	↔	RX
RX	↔	RX	RX	↔	TX
DCD	↔	DCD	DCD	↔	DCD
GND	↔	GND	GND	↔	GND
RI	↔	RI	RI	↔	RI

## 11.7 Power source

### IMPORTANT

Any installations involving electrical wiring and connections should be done by someone who is experienced in this field.

As described in the [Power specifications and consumption](#) section, the modem can be powered using:

- 4-pin Molex connector for the BT-5x00v2 and BT-6x00 models
- 4-pin screw terminal for the BT-6x01, BT-6x01EB and BT-6x21 models

- DC 2.5mm round plug for all models except the BT-5x00v2 series
- PoE (Power over Ethernet) for BT-6x01EB models

**WARNING**

DC 2.5mm Barrel Adapter shall not be used in hazardous locations.

### **11.7.1 Powering up the modem**

The modem will power up as soon as an 8 to 30 VDC voltage is applied to one of its power inputs and shuts off when this input voltage is below 4 VDC.

In addition, BT-5x00v2 modems require the IGN signal to be ON for the modem to start. When BT-5x00v2 modems detect the IGN signal transition to OFF, it engages its shutdown after a programmable delay.

### **11.7.2 Testing the power connection**

Check the PWR light on the modem: if it is turned on then the modem is powered. If it's off, then review the installation procedures.

If LED indicators are not accessible to the installer, a computer can be used to verify its functionality by running BlueVue Device Manager and attempting to connect to the modem.

## 12 Appendixes

### 12.1 BlueVue Device Manager Troubleshooting

Before troubleshooting, download and install the latest version of BlueVue Device Manager from [www.redlion.net](http://www.redlion.net).

#### 12.1.1 (ETHERNET) The BlueVue Device Manager message box displays “Detecting Modem at 192.168.0.1” indefinitely

Connect the modem to a computer using an Ethernet cable, and open BlueVue Device Manager. Set BlueVue Device Manager’s connection type to IP. BlueVue Device Manager will attempt to connect to 192.168.0.1 by default.

##### Possible cause #1

The cable is damaged.

##### Troubleshooting

Check the Link LED on the modem’s Ethernet connector (located on the back of the modem). If the LED is off, verify the cable.

##### Possible cause #2

The computer’s local IP configuration is incorrect.

##### Troubleshooting

- 1) In Windows XP, go to **Control Panel > Network Connections** and select the **local area connection** that corresponds to the Ethernet port in the “LAN or High-Speed Internet” list (it’s usually “Local Area Connection 1”).
- 2) Right-click the connection and click **Properties**. Select **Internet Protocol (TCP/IP)** in the list and click **Properties**.
- 3) Write down the existing values in order to restore them after configuring the modem, then select **Obtain an IP address automatically** and **Obtain DNS server address automatically**. The computer will now be ready to use the modem to access the Internet.

##### Possible cause #3

The modem is in a different network and DHCP is disabled. (This issue does not apply to brand-new modems at factory settings. It only applies to modems that have had their configuration modified.)

##### Troubleshooting

Follow the instructions below:

- 1) Connect the computer to the modem using a straight **serial cable**

- 2) Set BlueVue Device Manager to **connect to the modem** over the serial port by changing the connection type to Serial
- 3) Once the modem has been accessed, navigate to **CONF (Modem Configuration) > LAN IP**
- 4) Under Ethernet, set the Modem IP to **192.168.0.1**
- 5) Confirm that **DHCP is enabled** and that the **DHCP Start IP** is **192.168.0.4**. Set the End IP range to any value higher than 192.168.0.4. The default is 192.168.0.39.
- 6) Click **Submit** to save the changes
- 7) Reset the modem and restart the computer

### **12.1.2 (USB) The BlueVue Device Manager message box displays “Detecting Modem at 192.168.111.1” indefinitely**

#### **Possible cause #1**

The USB driver is not installed.

#### **Troubleshooting**

The **USB driver** for Windows must be installed before the modem’s USB functionality can be used. Visit [www.redlion.net](http://www.redlion.net) to **download** the USB driver then **install** it. It may be necessary to reboot the computer.

#### **Possible cause #2**

The modem has an old firmware version which does not support USB.

#### **Troubleshooting**

The USB functionality was introduced in version 3.0 of the firmware. **Upgrade the modem’s firmware** to the latest version available at [www.redlion.net](http://www.redlion.net). A walkthrough can be found in the [Firmware Upgrades](#) appendix.

### **12.1.3 (SERIAL) The BlueVue Device Manager message box displays “COMx is already in use”**

#### **Possible cause**

Another software application is already using the COM port.

#### **Troubleshooting**

Close all applications that could be using the serial port, including other instances of BlueVue Device Manager, then try again.

#### **12.1.4 (SERIAL) The BlueVue Device Manager message box displays “Detecting modem on COMx” indefinitely, or displays a warning about an unsupported modem**

Examine the DTR LED. If it is off, then the computer and the modem are not communicating.

##### **Possible cause**

The wrong type of cable is being used.

##### **Troubleshooting**

Use a straight-through RS232 standard DB9 cable. If using a custom-made cable, confirm that it follows the instructions in Section 11.6. If the **correct cable** is being used, then the **DTR LED** on the modem will **turn on** when BlueVue Device Manager attempts to access it.

##### **Possible cause**

BlueVue Device Manager is trying to connect to the wrong COM port.

##### **Troubleshooting**

Confirm that the **correct COM port** is selected in BlueVue Device Manager. It will attempt to use COM1 by default, but computers with built-in dial-up modems might have COM1 assigned to the built-in modem instead. To set the COM port BlueVue Device Manager should use, click on **Tools > Settings > Connection** and browse through the available COM ports. If the **DTR LED turns on**, then you will have found the right COM port.

#### **12.1.5 (SERIAL) The BlueVue Device Manager message box displays “Detecting modem on COMx” and then “Modem is not responding”**

##### **Possible cause**

BlueVue Device Manager and the modem are using different serial port settings.

##### **Troubleshooting**

Installing BlueVue Device Manager 1.7.1 or later will allow communication with a modem regardless of its serial settings.

#### **12.1.6 The BlueVue message box displays “[Modem]...is not responding to expected commands. Contact BlueTree Support.”**

##### **Possible cause**

BlueVue Device Manager has detected a potential hardware issue.

##### **Troubleshooting**

Contact Technical Support at [support@redlion.net](mailto:support@redlion.net).

## 12.2 Activation Troubleshooting

When the modem is connected to the cellular network, its WAN LED will stay on and will flash to indicate activity, BlueVue Device Manager's Modem Diagnostic screen will display a WAN IP. If the modem is not connected, the WAN light will be off, and the displayed WAN IP will be "N/A". This appendix covers issues with connecting to the network. If your modem is connected to the network but you cannot browse the internet, refer to 12.3 Troubleshooting.

**Each of the following conditions must be met before a modem can connect to the cellular network:**

- 1) The modem must be within coverage, and have an acceptable RF signal strength
- 2) The modem must be activated for use on the cellular network (CDMA) or have a valid SIM card (EDGE and HSPA)
- 3) The modem must be configured to connect to the cellular network
- 4) If the cellular carrier requires a user name and password, the modem's connection parameters (WAN Settings) must be configured

### 12.2.1 Verifying the signal strength

The modem's **SIGNAL LED should always be flashing or solid ON** when it has a strong enough signal to detect a cellular network. Additionally, the signal strength is displayed in the information box in the top right of the BlueVue Device Manager window. The minimum required for communication is 1 signal strength bar; however, a signal this weak is not likely to provide a stable connection.

**If the SIGNAL LED stays OFF**, or if the signal strength is lower than -98 dBm (such as -105 dBm), **there may be an issue** with the antenna or the modem may be in a low coverage area.



Figure 18 – Modem with good signal strength

### 12.2.2 Confirming the success of activation (CDMA only)

Once a modem has been activated, BlueVue Device Manager will **display its phone number** in the WAN (Modem WAN Settings) screen (some GSM carriers chooses to have the modem phone number hidden. In this case, the phone # may appear as blank).

For CDMA modems, if the phone number is blank, or does not correspond to the account's phone number, then activation has not been performed. Follow the instructions written in the **Quick Start Guide** that shipped with the modem to perform activation. The latest Quick Start Guide is also available for download at [www.redlion.net](http://www.redlion.net)

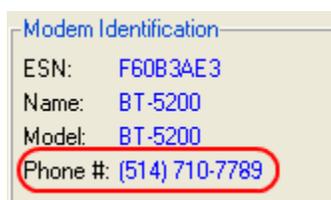


Figure 19 – Phone number being displayed on the Modem Diagnostic screen after activation

### 12.2.3 Configuring the Connection Initiation

The modem must be configured to connect to the network.

To do this, open BlueVue Device Manager and navigate to **WAN (WAN Settings)**, and then ensure that the following settings are applied:

- 1) The Dial String is **#777** for CDMA networks and **\*99\*\*\*1#** or **\*99#** for GSM networks
- 2) The Connection Initiation is **Always On** (default setting for firmware 3.60 and later)

Click **Submit** to apply any changes. The modem should now connect to the cellular network. Refer to this section's introduction for instructions on how to verify whether your modem is connected to the network or not.

### 12.2.4 Configuring the User Profile

If the modem's **Signal LED turns on** for a few seconds then **turns off**, this indicates that **authentication** on the cellular network is **failing**. The modem's User Profile will need to be configured.

Navigate to **WAN (WAN Settings)**. Enter the **user name** and **password** as provided by the cellular service provider.

### 12.2.5 Conclusion

As mentioned previously, when the modem is connected to the cellular network, BlueVue Device Manager's Modem Diagnostic screen will display a **valid WAN IP** and the **WAN LED will remain on and flashing to indicate activity of the cellular interface**.

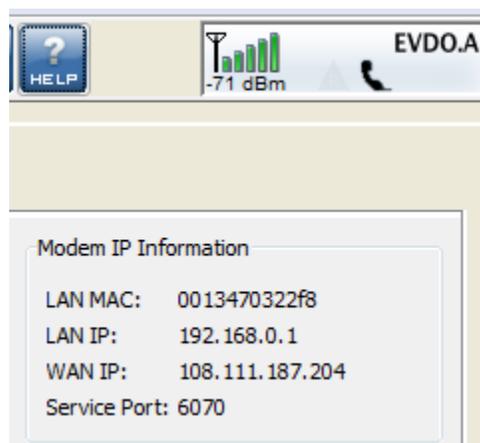


Figure 20 – WAN IP being displayed after the modem successfully connects to the cellular network

If after going through all of the above troubleshooting steps, the modem still does not acquire a WAN IP, then it is very likely that the account is not enabled by the cellular carrier. Contact the cellular service provider and ask them:

- CDMA: to confirm that the phone number assigned matches the modem's ESN (electronic serial number) as shown in DIAG (Modem Diagnostic), and that the account is ready to be used.

- GSM (EDGE/HSPA): to confirm that the SIM card holds a valid account (the SIM card number will be required).

## 12.3 Troubleshooting

This appendix assumes that the modem is currently online, and therefore the problem cannot be attributed to a lack of connectivity. BlueVue Device Manager's Modem Diagnostic screen should be displaying a valid WAN IP, i.e. an IP other than "N/A". If this is not the case, refer to 12.2 Activation Troubleshooting.

### 12.3.1 You cannot browse the Internet

#### Possible cause #1 (Ethernet only)

The computer's local IP configuration is incorrect.

#### Troubleshooting

The computer must be in the same subnet as the modem and must have the modem set as its gateway. The easiest way to achieve this is to enable automatic IP configuration (DHCP) on the computer.

- 1) In Windows XP, go to **Control Panel > Network Connections** (for Windows Vista, go to Control Panel > Network and Sharing Center) and **select the local area connection that corresponds to the Ethernet port** in the "LAN or High-Speed Internet" list (it's usually "Local Area Connection").
- 2) **Right-click the connection** and click **Properties**. Select **Internet Protocol (TCP/IP)** in the list and click **Properties**.
- 3) **Write down the existing values** in order to restore them if needed, then select **Obtain an IP address automatically** and **Obtain DNS server address automatically**. Click OK to close both dialog boxes, and reset the computer. It should now be ready to use the modem to access the Internet.

#### Possible cause #2 (Serial only)

You're connected to the modem using a serial cable and did not start a Dial-Up Networking session.

#### Troubleshooting

Unlike Ethernet/USB, you must **configure Windows** to use a serial cable to access the network. Even though the modem is connected to the Internet, your computer is not configured to browse the Internet through the modem.

You will need to **install a standard 33600bps modem driver** and **create a Dial-Up Networking session** in order to be able to browse the internet. **Refer to the [Dial-Up Networking in Windows](#) appendix** for a walkthrough for creating a Dial-Up Networking connection in Windows XP.

#### Possible cause #3

Your web browser is configured to use a proxy which cannot be accessed by the modem.

#### Troubleshooting

- 1) **Open a command prompt window** by clicking Start > Run then entering "cmd" in the Run window.
- 2) At the command prompt, type **ping google.com** and press Enter.

If you get a “Reply from xxx.xxx.xxx.xxx: bytes=32 time=xxxms TTL=xxx” response, then your web browser is configured to use a web proxy which is preventing you from browsing the Internet through the modem. Consult your network administrator for help on fixing this issue.

#### **Possible cause #4**

The cellular account does not allow web access.

#### **Troubleshooting**

Certain cellular accounts, particularly those where security is a high concern, do not allow web access. If you are attempting to test the connection by browsing the Internet, you may not be able to do so because of this account restriction.

### **12.3.2 (TCP/IP) You cannot communicate with a computer/device behind the modem**

This section is meant for TCP/IP connectivity. If the device is a serial-only device, skip to the next issue.

#### **Possible cause #1**

Your cellular carrier is operating a firewall which is blocking your attempts to connect.

#### **Troubleshooting**

Certain carriers have a firewall turned on by default that blocks all incoming connections.

- 3) **Open a command prompt window** by clicking Start > Run then typing “command” in the Run window
- 4) Type **telnet xxx.xxx.xxx.xxx 6070** where x is the modem’s WAN IP as assigned by the carrier

If you do not connect and see a “Welcome to BlueTree Wireless” message, then your carrier is likely blocking incoming connections. Contact your cellular service provider and ask them to open the TCP and UDP ports you will be using to access the device.

#### **Possible cause #2**

Your computer (from which you are initiating the connection) or network has a firewall blocking outgoing connections.

#### **Troubleshooting**

Confirm with your IT technician that no firewall is blocking outgoing connections.

#### **Possible cause #3**

You did not perform the appropriate port-forwarding rules on the modem.

## Troubleshooting

The modem must be configured to forward incoming traffic to the device, otherwise your connection attempts will never reach the device. Refer to [IP Networking Features](#) for further details.

### 12.3.3 (SERIAL) You cannot communicate with a device behind the modem

First, make sure the modem is configured to enable outside communication with the attached device. Refer to the “Serial IP” section of the main guide for details. The troubleshooting steps below assume the modem is configured properly.

#### Possible cause #1

The modem and the device are using different serial port settings.

## Troubleshooting

Using BlueVue Device Manager, navigate to **CONF (Modem Configuration) > Serial Port**, and **change the serial port settings** to the same values as those of the serial device. If the CTS and RTS pins are partially (or both) disabled, set the modem to use no flow control (“none”).

#### Possible cause #2

The cable wiring is incorrect.

## Troubleshooting

Refer to Section 11.6 for details on the required cable type.

#### Possible cause #3

The DTR signal is inconsistent.

## Troubleshooting

A flickering DTR signal will interrupt communication with the modem. The modem can be configured to ignore the changes in the DTR state. In BlueVue Device Manager, navigate to **CONF (Modem Configuration) > Serial Port**, and check the option to **Ignore DTR**.

## **12.4 Firmware Upgrades**

BlueTree periodically releases updates to the BlueX firmware used on the BT-5x00v2 and BT-6000 series modems. These updates improve the modem's stability and functionality by addressing issues and introducing new features. It is recommended to always upgrade to the latest version of the firmware.

Firmware upgrades can only be performed if BlueVue Device Manager is accessing the modem through an IP connection such as a local Ethernet, USB connection or a remote connection over the Internet. It is not possible to update the firmware using a serial cable.

Up until firmware 3.6.1, the modem's WAN IP address had to be static to perform a successful upgrade. If the WAN IP address was dynamic, (i.e. if its IP changes regularly), and the IP is changed when the modem resets during the firmware update procedure, then BVDM will not be able to reconnect and finalize the update, and the modem will revert back to its previous firmware the next time it is reset or power recycled. Firmware 3.6.1 has changed this and allows both static and dynamic WAN IP addressing schemes to update remotely with success.

### **12.4.1 Downloading the latest firmware**

Download the latest standard firmware package files from [www.redlion.net](http://www.redlion.net), and extract the zip file to a folder on your hard drive. It contains a file named `abt_version_bt6k.upd` as well as the release notes document. .

## Performing the ABT firmware upgrade

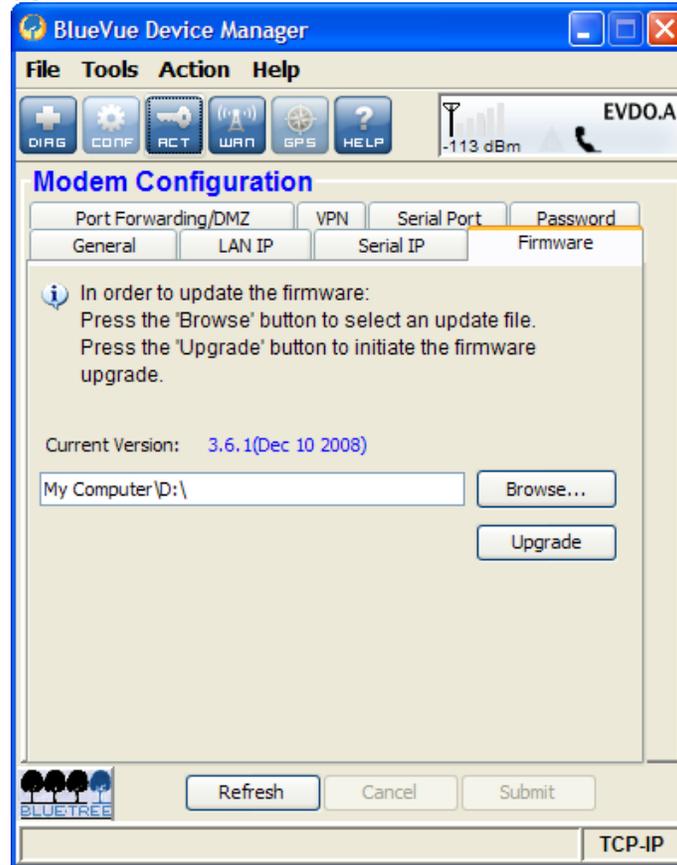


Figure 21 – Upgrading the firmware

- 1) Navigate to **CONF (Modem Configuration) > Firmware**.
- 2) Click the magnifying **Browse...** button and **locate the abt\_version\_bt6k.upd** file from the package that you extracted during the first step.
- 3) Click **Upgrade**.
- 4) Wait for BlueVue Device Manager to confirm that the firmware update was completed. If the upgrade is being performed locally, it should approximately take 2 minutes. If the upgrade is being performed remotely, then it could take up to 5 minutes depending on download speed.

## 12.5 Sending AT Commands

AT commands are short text strings that can be sent to the modem to set, remove and query modem's configuration parameters. BlueVue Device Manager is a software application that provides a graphical user interface designed to avoid manual entry of AT commands. However, not all configuration commands are available in BlueVue. Additionally, BVDM is only available in Microsoft Windows operating systems. For these and various other reasons, some users may want to send AT commands to the modem.

The full list of AT commands and their description is in the *AT Command Reference* manual, available at [www.redlion.net](http://www.redlion.net).

### IMPORTANT:

After sending AT commands to configure the modem, you must send **AT&W** to save the changes. Otherwise, they will be lost the next time the modem resets. You do not need to send AT&W after each command: you can send it just once after you're done configuring the modem.

### Note:

AT commands must end with a Carriage Return character. If you are not using a Windows operating system, you may have to configure your terminal emulator software or telnet client software to end lines with a Carriage Return (0x0D or \r).

### 12.5.1 Sending AT commands over an IP connection

If you can reach the modem using a crossover Ethernet cable, or a USB cable, or remotely to the modem's WAN IP, AT commands can be sent by performing a TCP (telnet) connection to the modem on port 6070. Here is an easy way to do this in Windows:

- 1) Click the **Start** button, then **Run**.
- 2) In the Run window, type **command** and click OK. A command prompt window will open.
- 3) Type **telnet xxx.xxx.xxx.xxx 6070** (replacing the x's with the modem's IP) and press **Enter**. By default, the modem's IP will be 192.168.0.1 for Ethernet, and 192.168.111.1 for USB. If connecting to a remote modem, you will need to know its WAN IP.
- 4) If the modem is password protected, you will have to enter its password.
- 5) You should get a "Welcome to BlueTree Wireless" message. You can now **send AT commands**.

### 12.5.2 Sending AT commands over a serial connection

If connected to the modem using a straight DB9 serial cable, AT commands can be sent using a terminal emulation software. The terminal and the modem must be using identical serial port settings to communicate. By default, the modem uses 115200 bps, 8 data bits, no parity, 1 stop bit, and hardware flow control. Below is an example for connecting to a modem with default serial port settings.

- 1) Open **HyperTerminal**. To do so, click the **Start** button and then click on **Run**. In the Run window, enter **hypertrm** and click OK.
- 2) On the **Connection Description screen**, enter **any name**, select any icon, and then click OK.

- 3) On the **Connect To** screen, change the **Connect using** value to the **COM port** the modem is connected to and click OK.
- 4) On the **COM Properties** screen, change the **Bits per second** value to **115200**. Leave all the other options untouched (8, None, 1, Hardware), and click OK.

You should now be able to send AT commands. You will not see what you type until you send the command ATE1 or enable echo in HyperTerminal's settings, but the commands will still be sent to the modem. Send AT+I1 and confirm that you see the words "BlueTree Wireless" in the response.

## 12.6 Dial-Up Networking in Windows

This appendix shows how to create a dial-up networking session to access the Internet/cellular network when connected to the modem using a serial cable. Although these instructions are written for computers running Microsoft Windows XP, this procedure should be similar with other versions of Microsoft Windows.

### 12.6.1 Installing the modem driver

- 1) Click **Start > Run**, type **control modem.cpl** and then click **OK** to open the Phone and Modem Options panel
- 2) Click the **Modems tab** and then click **Add**
- 3) You may be required to enter location information if this is the first modem installed. If this is the case, choose your region and area code in the information window.
- 4) Check the box labeled **Don't detect my modem...** and then click **Next**
- 5) Select **Standard 33600 bps Modem** from the list and click **Next**
- 6) Select the **COM port** that the modem is attached to then click **Next**
- 7) Click **Finish** to complete the driver installation

### 12.6.2 Creating a Dial-Up Networking session

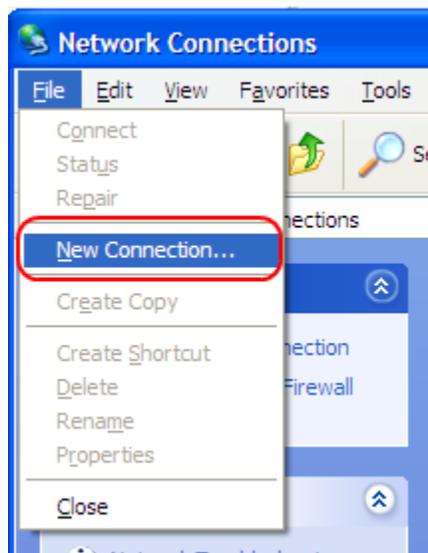


Figure 22 – Creating a new connection in Windows XP

- 1) Click **Start > Run**, type **control ncpa.cpl** and then click **OK** to open the Network Connections panel.
- 2) Click on **File > New Connection** (as per the screenshot above)
- 3) The New Connection Wizard welcome dialogue will appear. Click **Next**.
- 4) The Network Connection Type dialogue will appear. Select **Connect to the Internet** and click **Next**.

- 5) The Getting Ready dialogue will appear. Select **Set up my connection manually** and click **Next**. Name the connection in the new window.
- 6) The Internet Connection dialogue will appear. Select **Connect to a dialup modem** and click **Next**.
- 7) **If there is more than one modem installed in Windows**, the Select a Device dialogue will appear. If this is the case, select **Standard 33600bps Modem** and click **Next**. Otherwise, proceed to the next step.
- 8) The Connection Name dialogue will appear. Type in **any name** for the connection and click **Next**.
- 9) The Phone Number To Dial dialog will appear. Enter **#777** for CDMA or **\*99\*\*\*#1** or **\*99#** for GSM (EDGE/HSPA).
- 10) The Internet Account Information box will appear. Enter the **username and password associated with the account** (if any) in the corresponding fields and click **Next**.

The DUN connection is now set up, and your PC is ready to connect to the cellular network. Right-click your new connection in the Network Connections list, and click Connect.

Once the connection has been established, the modem will by default assign the attached device the LAN IP 192.168.0.3, while the modem itself will have the LAN IP 192.168.0.2. These settings are configurable in BlueVue Device Manager under **CONF (Modem Configuration) > LAN IP > PPP**.

## 12.7 Warranty

Red Lion warrants its cellular modems against all defects in materials and workmanship for a period of three (3) years from the date of purchase. The sole responsibility of Red Lion under this warranty is limited to either repair or, at the option of Red Lion, replacement of the cellular modem. There are no expressed or implied warranties, including those of fitness for a particular purpose or merchantability, which extend beyond the face hereof. Red Lion is not liable for any incidental or consequential damages arising from the use, misuse, or installation of the Red Lion modem. This warranty does not apply if the serial number label has been removed, or if the cellular modem has been subjected to physical abuse, improper installation, or modification. The unit is automatically registered for warranty at the date it is purchased and/or shipped.

## 12.8 Technical Support

---

<b>Phone</b>	1-877-432-9908
<b>Hours</b>	Mon – Fri 8:45 am - 5:30 EST
<b>Fax</b>	1-518-877-8346
<b>Email</b>	<a href="mailto:support@redlion.net">support@redlion.net</a>
<b>Web</b>	<a href="http://www.redlion.net">www.redlion.net</a>

---